
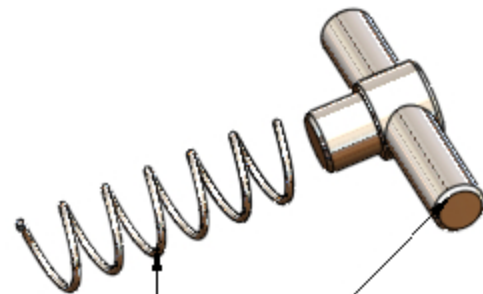


To remove stock trigger, tap pin out from the right side to the left side.

Put spacer on the inside of the trigger frame.

Put nut on the inside of the trigger frame.

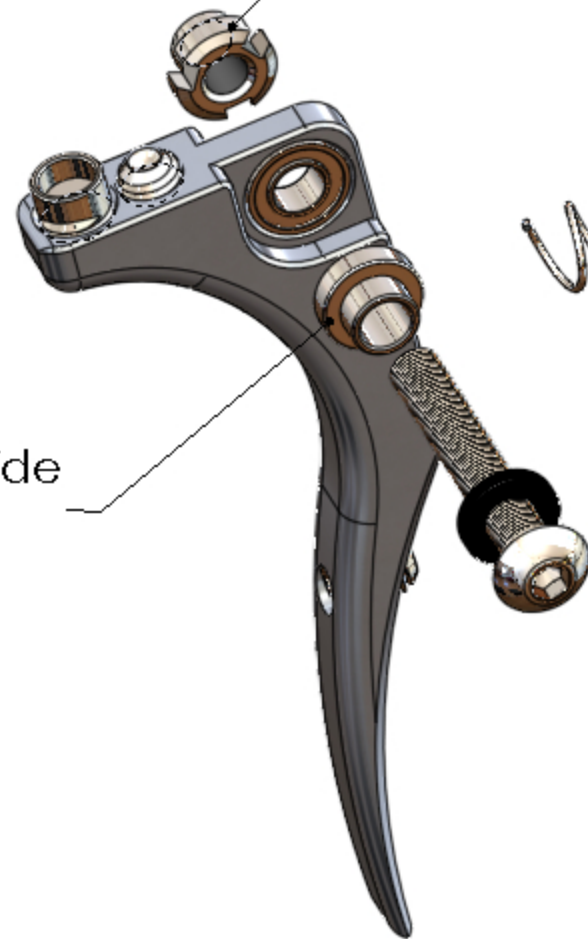

Slide pin thru the trigger frame with the spring mount in between.

Install spring after mounting trigger.