
E-Mag Exploded View




click on image


Rail and Main Body

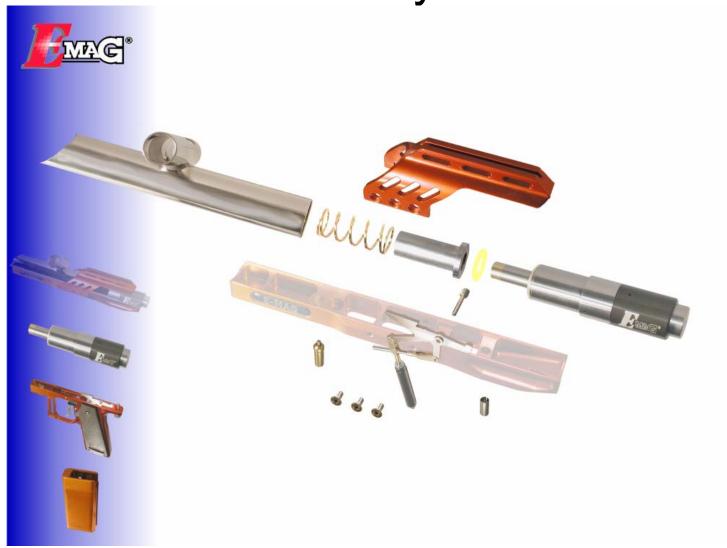


Valve, Bolt, and Spring

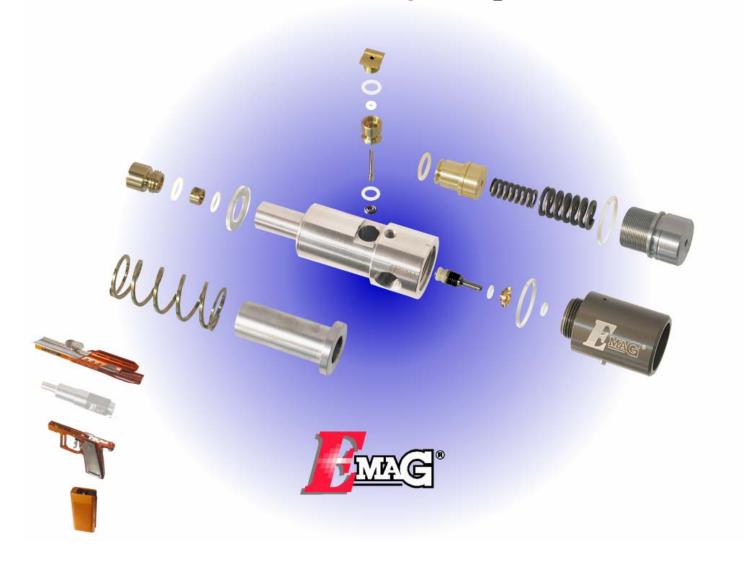

Frame and Electronics

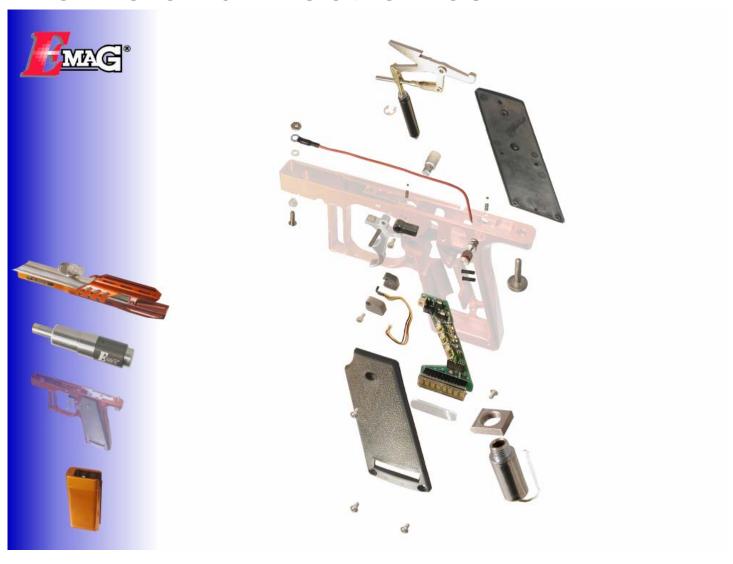

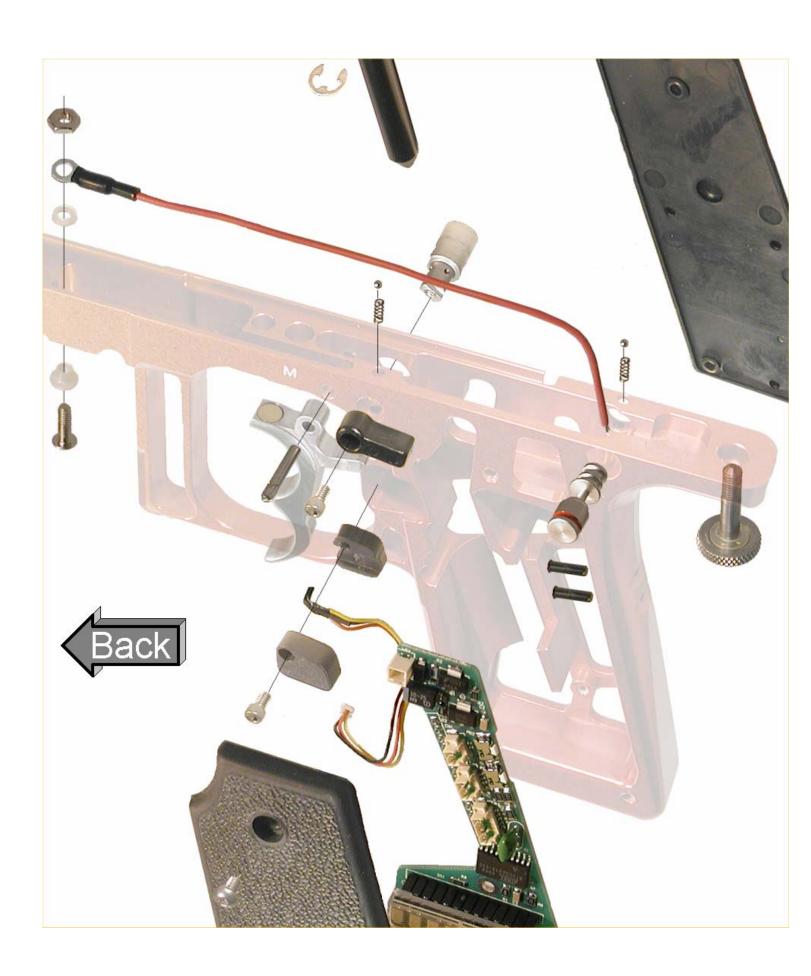

Battery and Charger



E-Mag Rail Part #1410



Available in black only.

Order Online Now!

Twist Lock Assembly Part #223



Assembly that holds the barrel in.

Order Online Now!

Rail Bushing Part #129



The grip frame and rail are held in alignment with this bushing. It goes in the field strip screw hole.

Order Online Now!

Sear Assembly Part #1386



The entire sear assembly for the E-mag. Comes preadjusted for trigger rod length and solenoid plunger position.

Order Online Now!

Sear Axle Pin Part #775



Screws in the side of the marker into the sear bushing.

Order Online Now!

Sight Rail Part #1392



Comes in black only.


Sight Rail Screw Part #770



Very short flat head screws. Do not use hardware store screws; they might hit the sear.

Order Online Now!

Main Body (Hopper Left) Part #1414

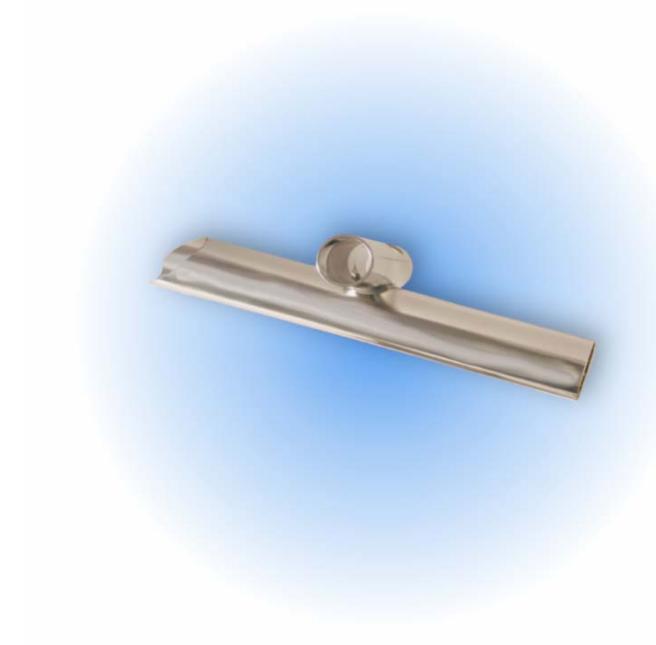

See the Main Body page under Upgrades for a complete selection.

Grips Part #1297



Rubber E-mag grips, sold by the pair.

Order Online Now!

Grip Screw/ Solenoid Mount Screw Part#1307



Grip screws, three per side. Also used to hold the solenoid mount in place.

Order Online Now!


PCB and Solenoid Assembly Part #1639



PC board and solenoid as one ready to go assembly. Comes pre programmed too!


Order Online Now!

Extender Button Part #1394

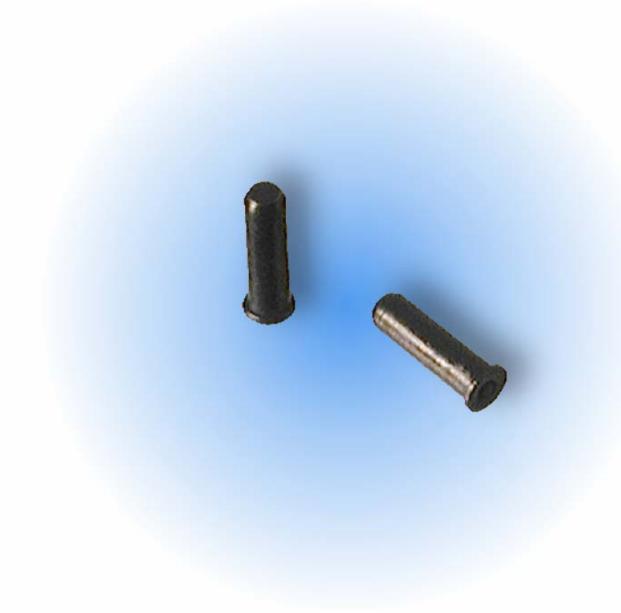

The little buttons in the back of the grip frame that are used to change the program settings.

Field Strip Screw Part #432

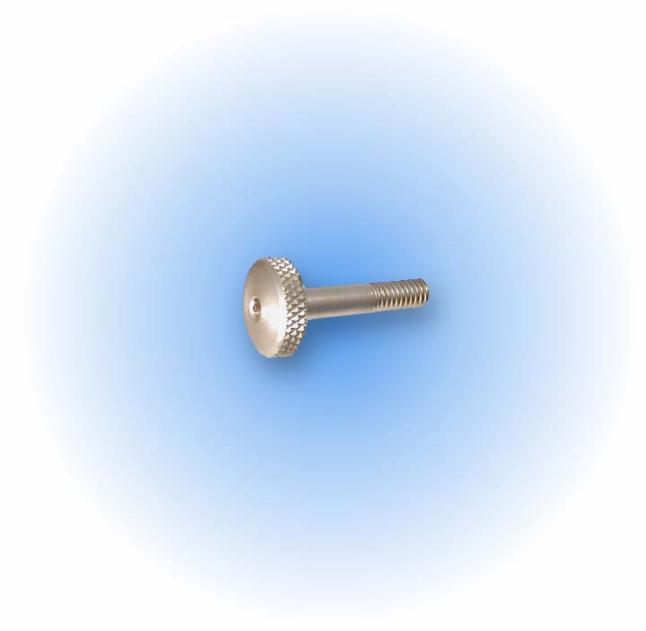

The screw that holds in the entire valve assembly.

Order Online Now!

Hall Harness Part #1304



This is the sensor that detects the magnet in the back of the trigger to fire the marker. Comes as a complete assembly.

Hall Holder/ Bottom Part #1320



The bottom half of the holder for Hall Effect Sensor.

Order Online Now!

Selector Lever Bolt Part #1309



This bolt holds the selector lever on its shaft.

Order Online Now!


Hall Holder/ Top Part #1422



The top half of the sensor holder.

Order Online Now!

LED Window Part #1316

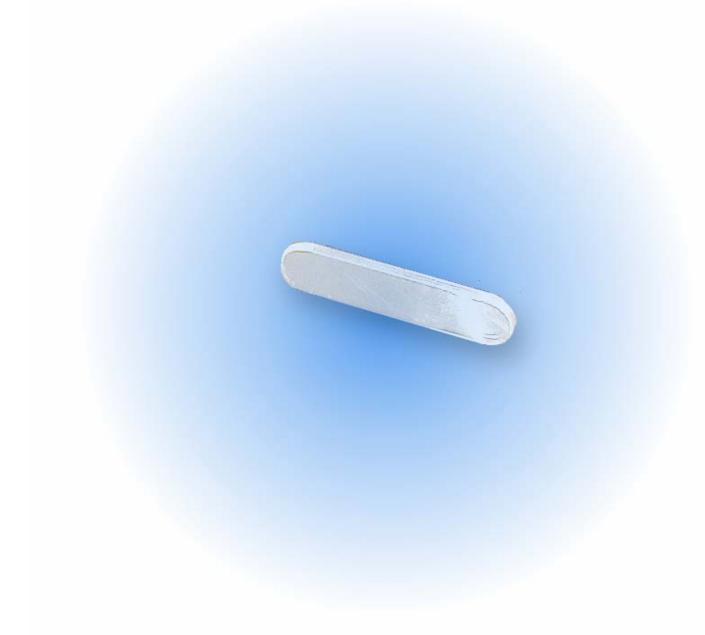

Window inside of rubber grip that protects the LED display.

Order Online Now!

Selector Switch Lever Part #1321



Selector lever that switches between electronic and manual modes. Connects to selector switch.

Hall Mount Bolt Part #1310



Bolt that holds the Hall Effect sensor mounts.

Order Online Now!

Selector Switch Part #1287



This switch controls if the marker is in electronic or manual mode. Be careful when removing this part; there are springs and ball detents under this piece.


Nylon Bushing Part #1328



Insulator bushing for the battery contact screw in the front of the E-mag grip frame.


Order Online Now!

Nylon Washer Part #1327

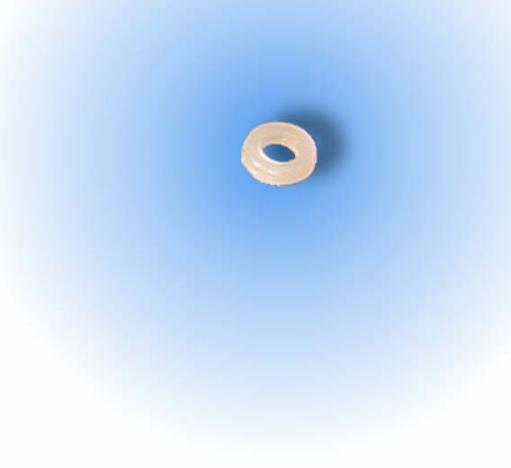

This is the other half of the insulator for the battery terminal mounting in the front of the grip frame.

Wire Lead Part #1594

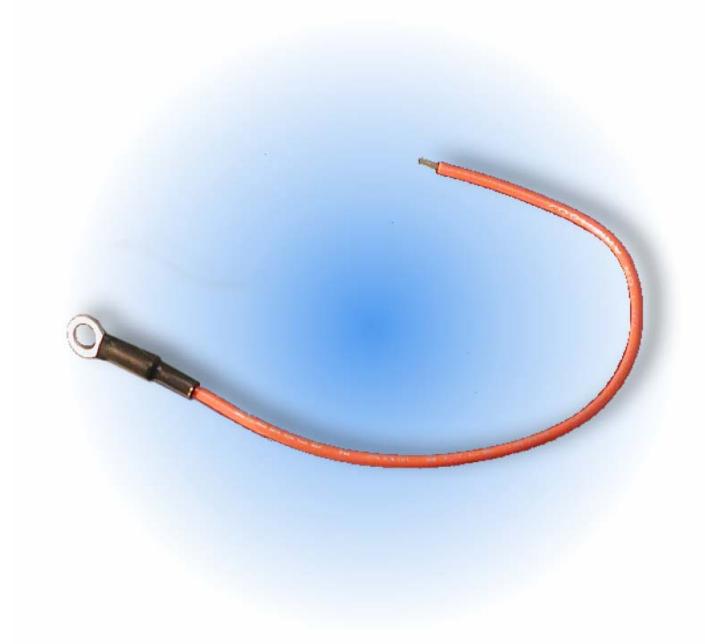

The power wire from the battery contact bolt in the front of the grip frame to the PC board.

Positive Terminal Nut Part #1312



This nut is part of the positive battery contact.

Order Online Now!

Positive Terminal Part #1311



This bolt is part of the positive battery contact and uses the nylon insulators to isolate it from the grip frame.


Order Online Now!

Sear Lock Part #1462



If you are able to see the red line the marker is off safe and will fire. Be careful when removing this shaft; there are springs and ball detents in the frame.

Safety Ball Part #195

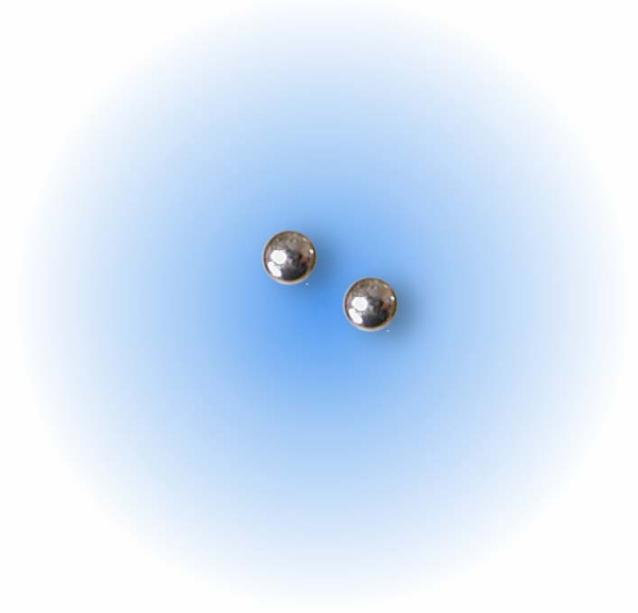

Hard steel ball bearing used as the safety detent.

Order Online Now!

Safety Spring Part #197



Spring that goes under the ball detent in the safety.

Order Online Now!


Solenoid E Clip Part #1470



This clip holds in the solenoid plunger.

Order Online Now!

Solenoid Mount Part #1325

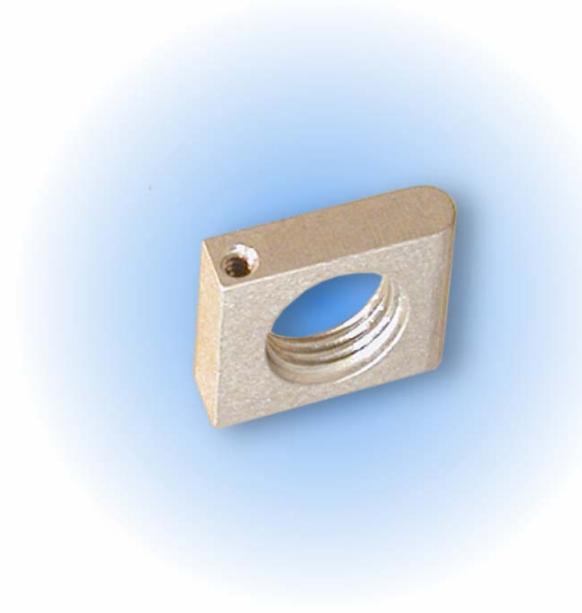

Solenoid screws into this mount and the whole thing slides into the grip frame.

Order Online Now!

E-Mag Trigger Part #1411



Entire ready-to-go trigger assembly. Includes magnets. Does not come in colors.

Order Online Now!


Magnet (Five Pack) Part #1313



Super strong rare earth magnet that is used to adjust trigger tension. Take them out for less, add them for more tension.

Order Online Now!



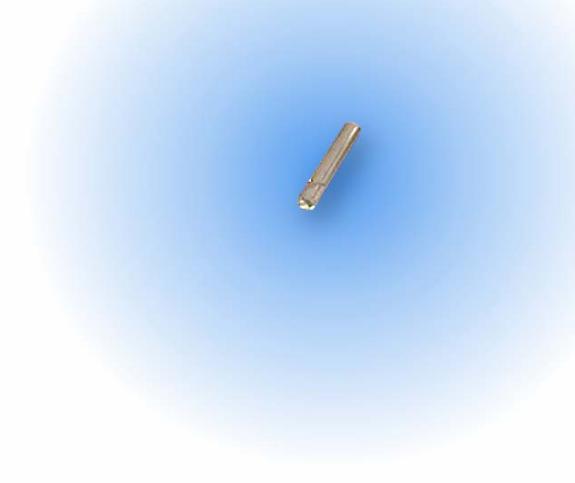

The axle for the sear. The original pin needs to be pressed out from the right side of the marker (side without the E-mag logo on valve). The new pin gets pressed in from the left side.

Battery Pack Housing Complete Part #1393



Complete housing assembly; battery not included. Comes in black only.

Order Online Now!

Battery Pack Part #1223



This is the complete NiMh battery pack including contacts. Don't forget to recharge before use and remember to put the spacer o-ring back in the bottom of the housing.

Battery Saver Plug Part #1319



This is the pin that turns the battery on and off. Make sure you remove before flight!

Order Online Now!

E-Mag O-ring Battery Bottom Part # 1646



This o-ring goes under the battery pack inside the battery housing so the battery makes good contact and does not rattle.

Battery Housing Screws Part #1220



These are the bolts that hold the battery case together.

Order Online Now!

Battery Charger Cord Part #1388



Standard cigarette lighter adapter cord. Plugs into battery recharger.


Order Online Now!

Charger Assembly Part #1487



Battery charger for E-mag. Does not have the cigarette lighter adapter. Takes 12VDC input.

Solenoid Part #1237

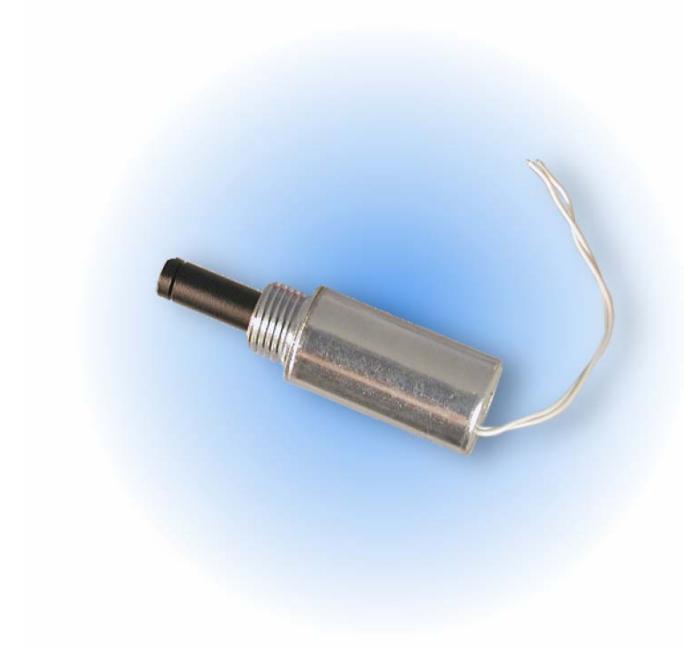

Solenoid that pulls the sear to fire the marker. Must be soldered to the PC board.

www.airgun.com www.automags.org Airgun-UK

Email to: office@airgun.com

Office hours:
9:00 am - 5:00 pm
(Central Time)
Monday through Friday
Office Tel: (847) 520-7507
Office Fax: (847) 520-7848

Tech Support hours: 10:00 am to 11:30 am, 1:00 pm - 4:00 pm (Central Time) Monday through Friday

Tech Support Tel: (847) 520-7225

