


TIPPMANN®




E-GRIP™ PARTS LIST

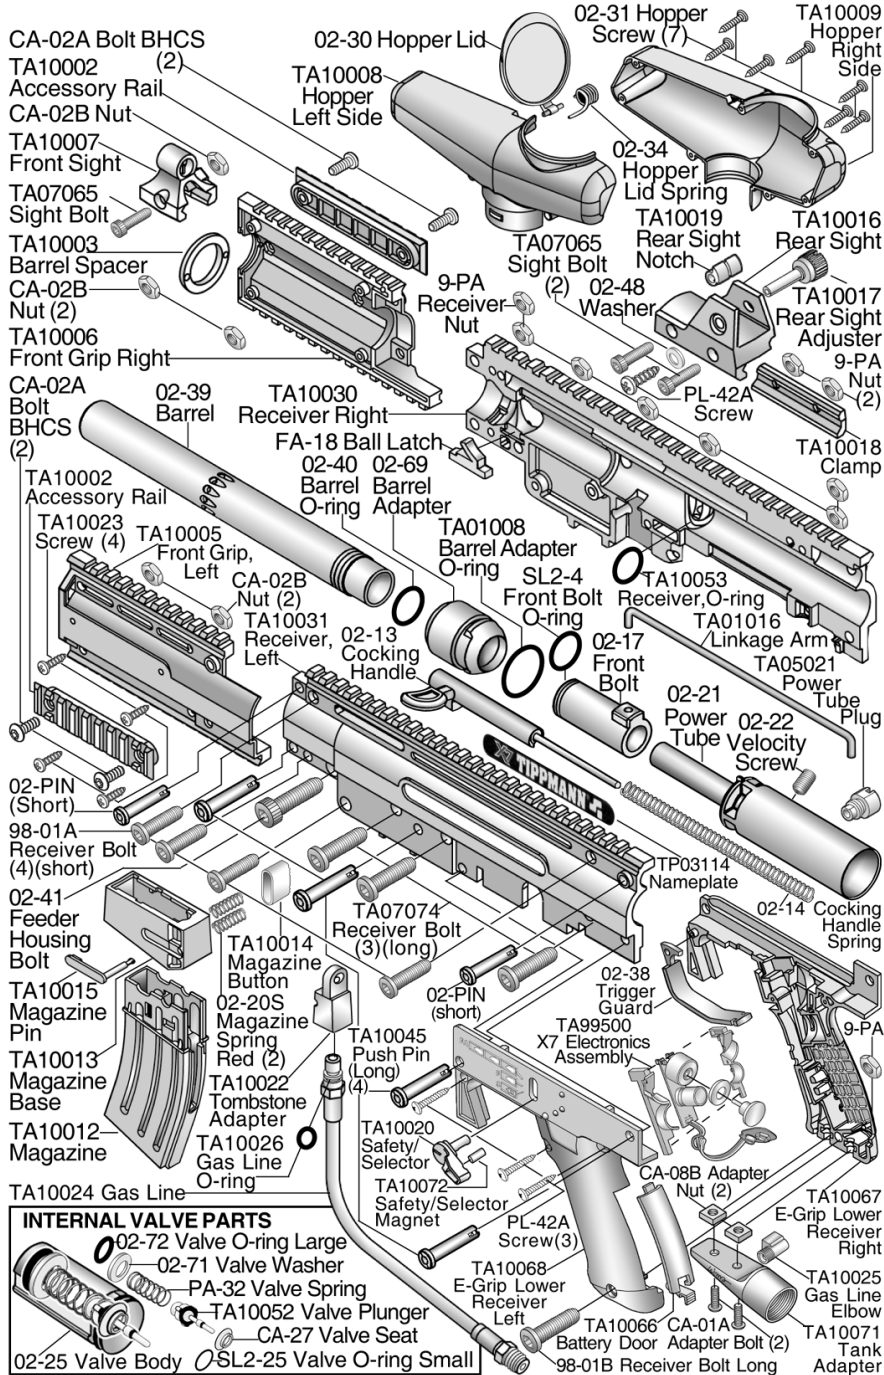

WARNING

DO NOT DISASSEMBLE THIS MARKER WHILE IT IS PRESSURIZED WITH AIR. DO NOT PRESSURIZE A PARTIALLY ASSEMBLED MARKER.

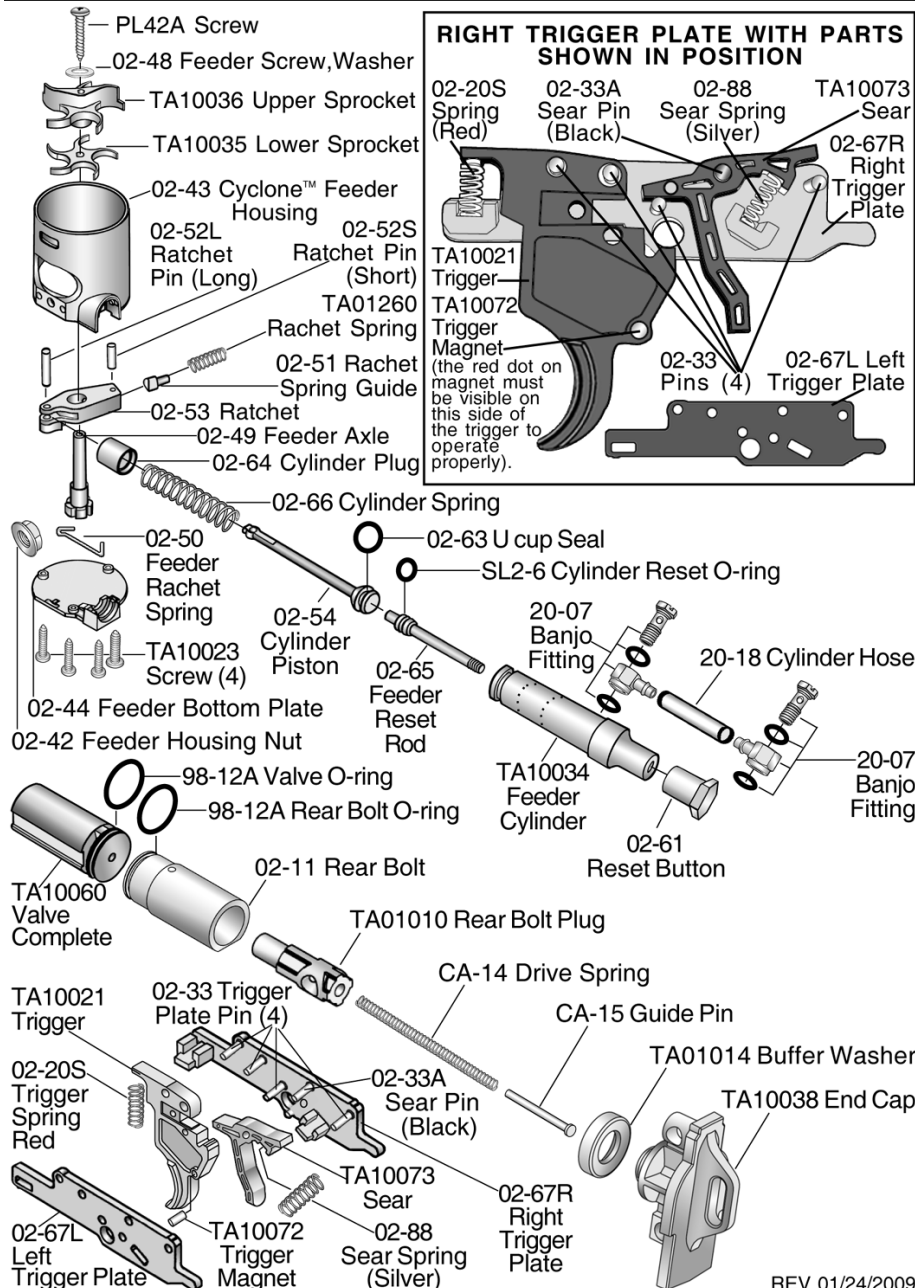

RIGHT TRIGGER PLATE WITH PARTS SHOWN IN POSITION

02-20S Spring (Red)
 02-33A Sear Pin (Black)
 02-88 Sear Spring (Silver)
 TA10073 Sear
 02-67R Right Trigger Plate
 TA10021 Trigger
 TA10072 Trigger Magnet (the red dot on magnet must be visible on this side of the trigger to operate properly).
 02-33 Pins (4)
 02-67L Left Trigger Plate