



Spacer

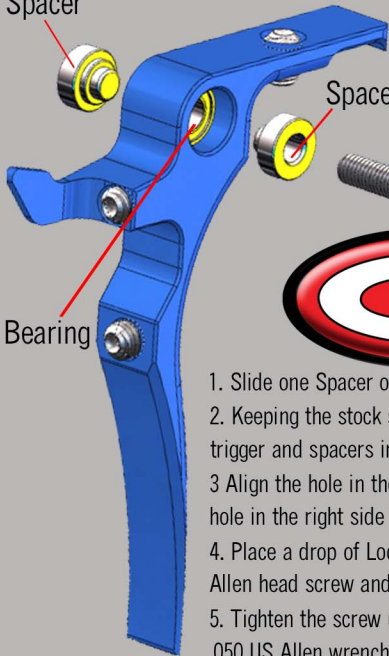

Spacer Set Screw

1/16 Allen screw adjusts forward movement of the trigger

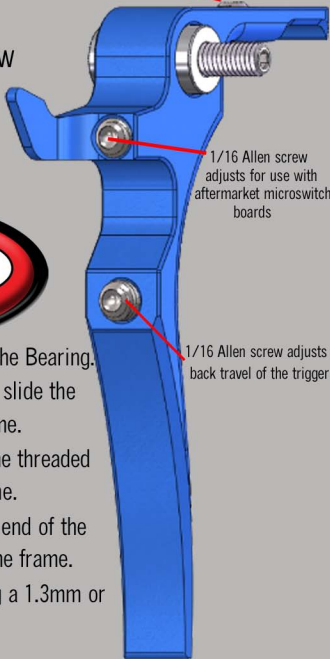

1/16 Allen screw adjusts for use with aftermarket microswitch boards

1/16 Allen screw adjusts back travel of the trigger



Bearing

1. Slide one Spacer on each side of the Bearing.
2. Keeping the stock spring in place, slide the trigger and spacers into the grip frame.
3. Align the hole in the spacer with the threaded hole in the right side of the grip frame.
4. Place a drop of Loctite 242 on the end of the Allen head screw and screw it into the frame.
5. Tighten the screw until snug using a 1.3mm or .050 US Allen wrench.