



1. Slide one Spacer on each side of the Bearing.
2. Keeping the stock spring in place, slide the trigger and spacers into the grip frame.
3. Align the hole in the spacer with the threaded hole in the left side of the grip frame.
4. Place a drop of Loctite 242 on the threaded end of the Allen head screw and screw it into the frame.
5. Tighten the screw until snug using a 1/16 US Allen wrench.

** Over tightening the set screw could damage bearing components causing the trigger to stick**