



The following is a step by step guide to help you install a CP Sling Blade or Rake trigger into a 07 Shocker NXT Grip Frame.

#### **Tools you will need**

- .050 Hex key (Allen wrench)
- 1/16 Hex key (Allen wrench)
- 5/64 Hex key (Allen wrench)
- Pick (Optional)

## STEP 1

Using 5/64 hex Allen wrench remove trigger screw.



## STEP 2

Remove stock trigger through grip frame.




### STEP 3

Using the .050 hex Allen wrench remove stock trigger spring assembly.



## STEP 4

Install spring assembly into new CP trigger.

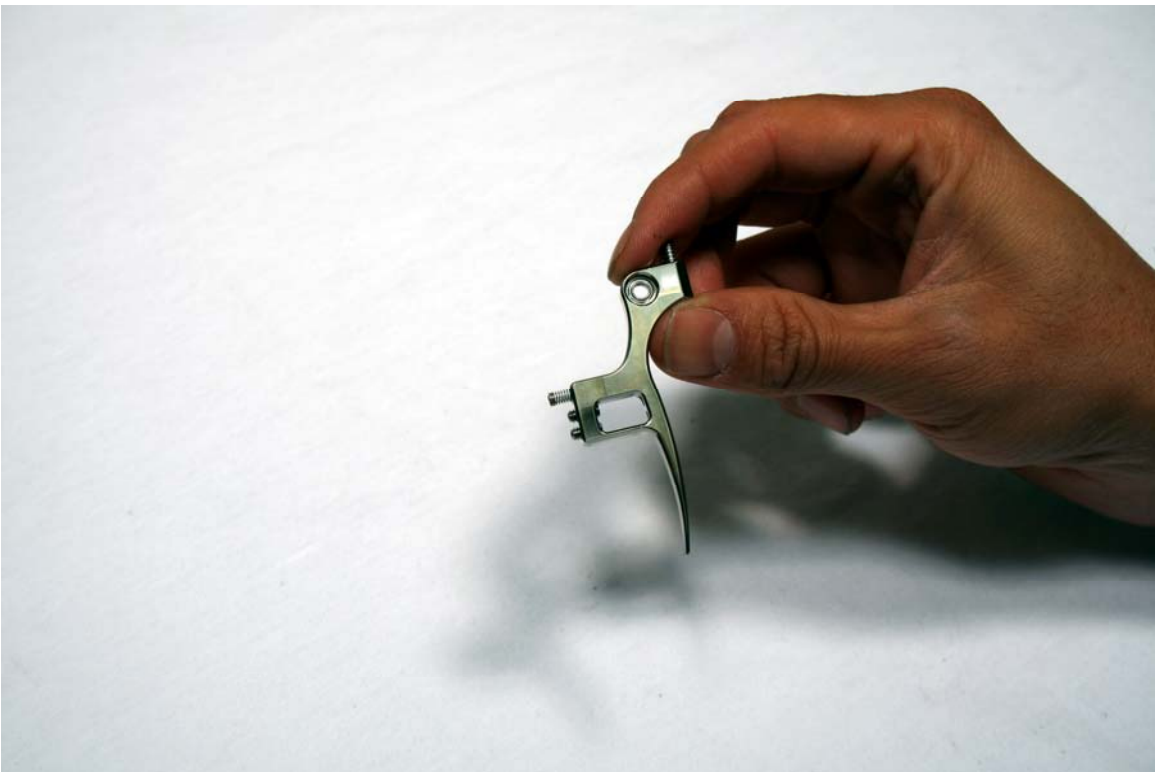

## STEP 5

Install trigger spacer (provided with trigger) with stepped side facing bearing into trigger.





## STEP 6

Install CP trigger into grip frame.





## STEP 7

Install trigger screw (supplied with trigger) into trigger frame and tighten. CAUTION make sure trigger bearing is centered in the screw hole before installing screw or damage to the bearing may occur.



## STEP 8

Using a .050 hex Allen wrench adjust trigger spring, switch contact, and rear travel screws.



## STEP 9

Using a 5/64 hex Allen wrench adjust forward travel screw.

