





PLANET ECLIPSE: GTEK

USER MANUAL / ENGLISH



.68 CAL


APT  
ECLIPSE<sup>®</sup> ADVANCED  
PAINTBALL TECHNOLOGY

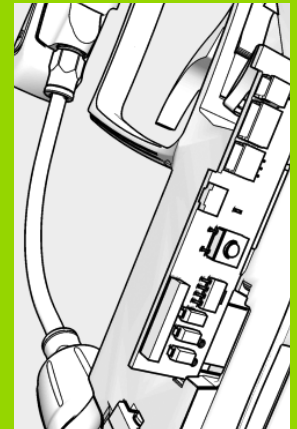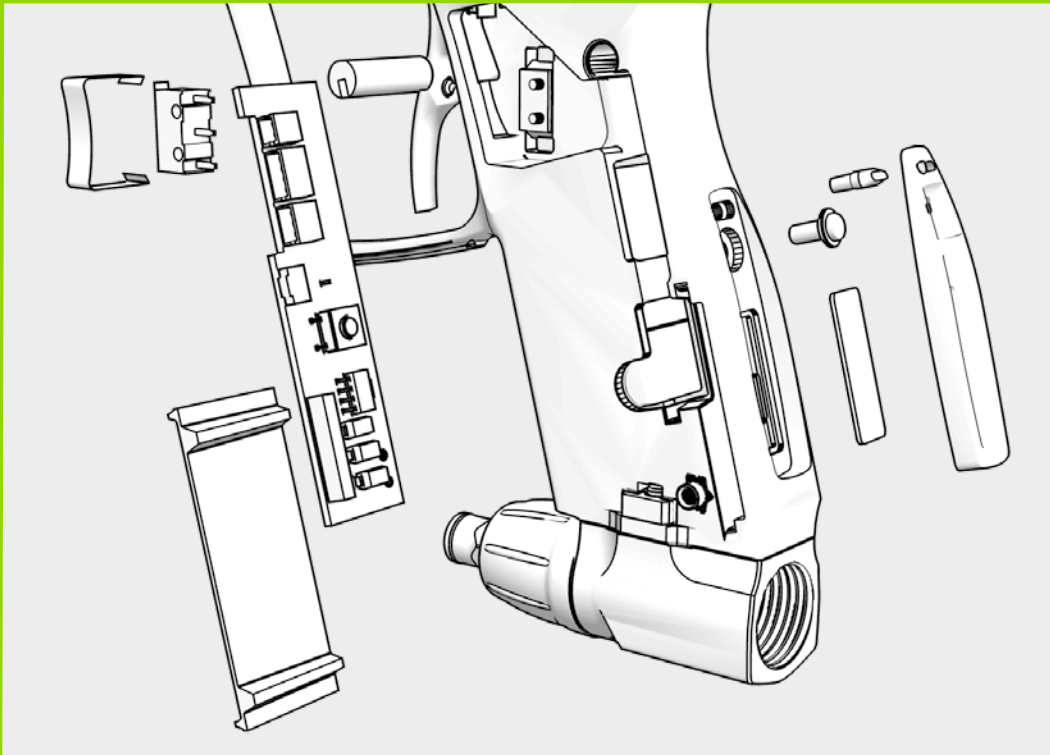


# WARNINGS

## READ CAREFULLY BEFORE USE


### **THE PLANET ECLIPSE GTEK IS NOT A TOY. PAINTBALL SAFETY RULES MUST BE FOLLOWED AT ALL TIMES.**


 Careless or improper use of the GTEK, including failure to follow instructions and warnings within this User Manual could cause serious injury or death.

 Do not remove or deface any warnings attached to the GTEK.


 Paintball industry standard eye/face/ear and head protection designed specifically to stop paintballs and meeting ASTM standard F1776 (USA) or CE standard (Europe) must be worn by the user and any person within range. Proper protection must be worn during assembly, cleaning and maintenance.


 Hearing protection should be worn.

 Never shoot at a person who is not wearing proper protection.

 Never look directly into the barrel of the marker. Accidental discharge into the eyes may cause permanent injury or death. Never look into the barrel or breech area of the GTEK whilst the marker is switched on and able to fire.


 Keep the GTEK switched off until ready to shoot.


 Treat every marker as if it is loaded and ready to fire.

 The electronic On/Off button is the marker's disabling device, also known as a safety. Always switch off the marker when not in use.


 Always fit a barrel-blocking device to the GTEK when not in use.


 Always remove paintballs from the GTEK when not in use.


 Do not field strip or remove any parts while the marker is pressurised.


 Do not pressurise the GTEK without all the components of the marker correctly installed, as high-pressure gas may be emitted.


 Do not fire the GTEK without the bolt correctly installed.

 Never put your finger or any foreign objects into the paintball feed tube of the GTEK.

 Never allow pressurised gas to come into contact with any part of your body.

 Always remove the first stage regulator and relieve all residual gas pressure from the GTEK before disassembly.

 Always remove the first stage regulator and relieve all residual gas pressure from the GTEK for transport and storage.









 Always follow guidelines given with your first stage regulator for safe transportation and storage.

 Always store the GTEK in a secure place.

 Observe all local and national laws, regulations and guidelines.

# WARNINGS

## READ CAREFULLY BEFORE USE

-  Persons under 18 years of age must have adult supervision when using or handling the GTEK.
-  Use only professional paintball fields where codes of safety are strictly enforced.
-  Use compressed air/nitrogen only. Do not use any other compressed gas or pressurised liquid including CO2.
-  Always follow instructions, warnings and guidelines given with any first stage regulator you use with the GTEK.
-  Use 0.68 inch calibre paintballs only.
-  Always measure your marker's velocity before playing paintball, using a suitable chronograph.
-  Never shoot at velocities in excess of 300 feet (91.44 metres) per second, or at velocities greater than local or national laws allow.
-  Any installations, modifications or repairs should be carried out by a qualified individual at a licensed and insured paintball facility.

### WARNING!



This user manual must accompany the product in the event of resale or new ownership. Should you be unsure at any stage you must seek expert advice.



#### **This Users Manual is in English.**

It contains important safety guidelines and instructions. Should you be unsure at any stage, or unable to understand the contents of this manual you must seek expert advice.



#### **Le mode d'emploi est en Anglais.**

Il contient des instructions et mesures de sécurité importantes. En cas de doute, ou s'il vous est impossible de comprendre le contenu du mode d'emploi, demandez conseil à un expert.



#### **Este manual de usuarios (operarios)**

Usuarios está en Inglés. Contiene importantes normas de seguridad e instrucciones. Si no está seguro de algún punto o no entiende los contenidos de este manual debe consultar con un experto.



#### **Diese Bedienungs - und Benutzeranleitung ist in Englisch.**

Sie enthält wichtige Sicherheitsrichtlinien und -bestimmungen. Sollten Sie sich in irgendeiner Weise unsicher sein, oder den Inhalte dies Heftes nicht verstehen, lassen Sie sich bitte von einen Experten beraten.

---

## QUICK START (06-16)

06	Setting up the GTEK
08	Switching the GTEK On/Off
09	LED indicators
10	Switch the GTEK On/Off with the OLED board fitted
11	OLED indicators
12	Velocity adjustment
13	Trigger adjustment
14	Unloading the GTEK
16	Storage and transportation

## MAINTENANCE

17	On-line maintenance videos
----	----------------------------

## ELECTRONICS (18-23)

18	The set-up mode
19	LED parameters
20	The OLED set-up mode
21	OLED parameters

## RESET (24-25)

24	Factory reset
25	Installing a 9V battery

## FAULT FINDING (26-29)

26	Fault finding tables
----	----------------------

## TECHNICAL INFORMATION (30-41)

30	Parts list
32	Tournament lock
33	Installing the GTEK OLED board
34	SL4 inline regulator
35	GTEK bolt assembly
36	Solenoid assembly
37	On/Off Purge System (OOPS) assembly
38	Trigger assembly
	Clamping feed tube assembly
39	GTEK circuit board
	GTEK OLED board
40	Frame assembly
41	Breach Sensor (BS) assembly

## SUPPORT (42-45)


42	Index
43	Our promise
44	Notes



# QUICK START

## SETTING UP THE GTEK

FIG-1

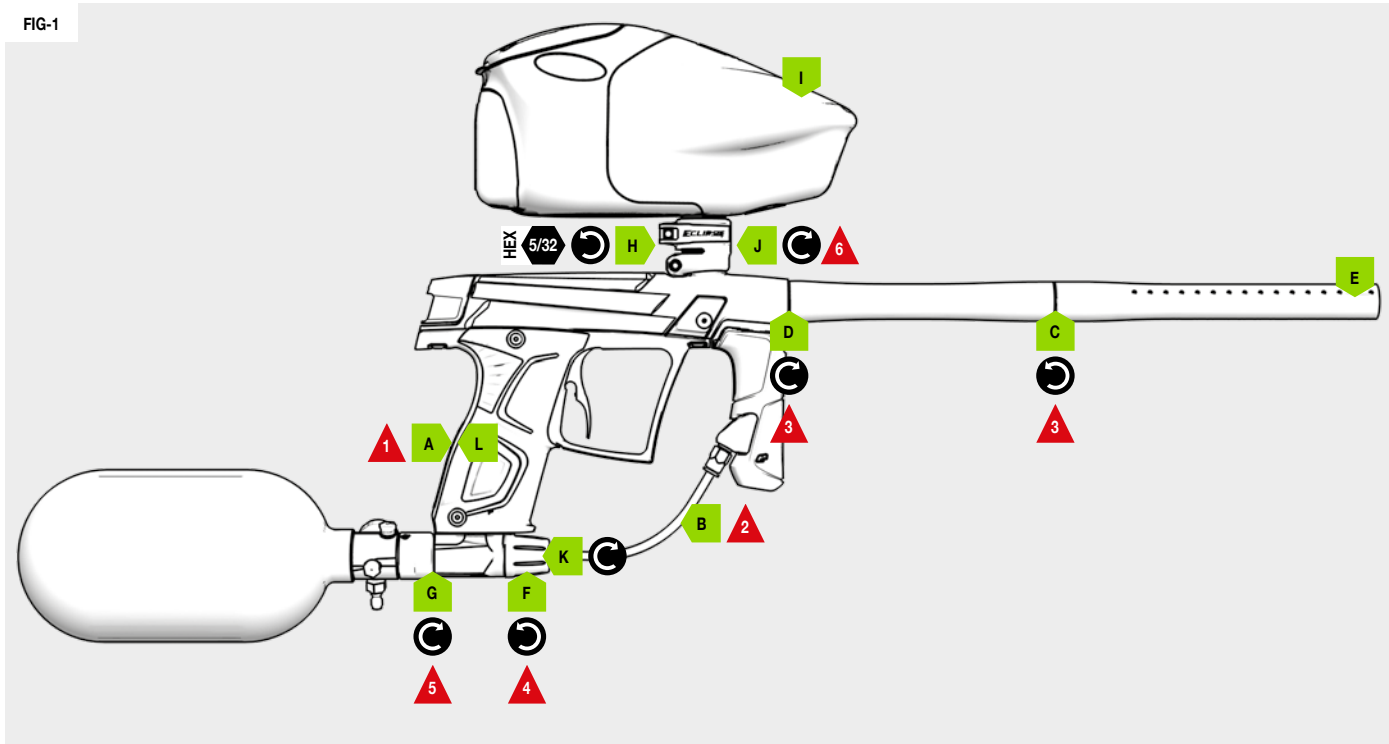

### FIG-1

- A Ensure the marker is switched off before you begin.**
- B Check the condition of the macroline before you progress.**
- C Screw both ends of the barrel together.**  
Screw the barrel tip counter-clockwise into the barrel back.
- D Screw the complete barrel to the marker.**  
The barrel back screws clockwise into the marker body.
- E Fit a barrel blocking device for safety.**
- F Ensure the marker is de-gassed.**  
Unscrew the On/Off Purge System (OOPS) knob counter-clockwise.
- G Attach the pre-set air system.**  
Screw the air system clockwise into the OOPS body.
- H Loosen the clamping feed neck.**  
Open the feed neck lever away from the feed neck.  
Unscrew the feed neck lever screw counter-clockwise.
- I Attach the loader.**  
If the feed neck is too tight, loosen the clamping feed neck more.
- J Secure the loader.**  
Close the feed neck lever to secure.  
Screw the feed neck lever screw clockwise to tighten.
- K Gas the marker.**  
Screw the On/Off Purge System (OOPS) knob clockwise.
- L Switch on the GTEK.**

- 1 IMPORTANT!** To switch On/Off, see pages 8-11.
- 2 IMPORTANT!** Damaged or worn macroline can be dangerous.
- 3 DO NOT** over-tighten the barrel.
- 4 IMPORTANT!** Always ensure marker is de-gassed when setting up.
- 5 NEVER** use CO2. Compressed air or Nitrogen only.
- 6 DO NOT** over-tighten the feed neck. This may damage the GTEK.

## WARNING!



Always make sure the marker is off with a barrel blocking device installed and that no paintballs are in the GTEK or loader before installing an air system.

Compressed air and nitrogen systems can be extremely dangerous if handled or used incorrectly.

Only attach an air system certified for use within the country of use.

Never add lubricants or grease into the fill adaptor of the air system regulator.

Ensure that all screws are tightened and no parts are loose before installing an air system.

Do not pressurise the GTEK without the bolt system correctly installed, as high pressure gas will be emitted.

Do not install a compressed air system or load paintballs into the GTEK until you feel confident with your ability to handle the marker safely and responsibly.

# QUICK START

## SWITCHING THE GTEK ON/OFF

The navigation console **A** houses the Select button **B** and the LED indicator **C**. Use the console to switch the GTEK On/Off and change the marker settings.

### FIG-1

To switch the GTEK on press and hold the Select button. Release the Select button when the LED lights up and the GTEK will begin its power up sequence. At the end of the power up sequence the LED Indicator will show the battery status with a steady colour for 2 seconds (see table 1 for battery status colour information).<sup>1,2</sup>

TABLE 1

LED COLOUR	BATTERY STATUS
GREEN	Battery level is good.
YELLOW	Battery level is low.
RED	Replace the battery.

To switch the GTEK off press and hold the Select button. Release the Select button when the LED on the navigation console turns red. The GTEK will now switch off.

- When the GTEK is turned on, the breech sensor is automatically enabled.
- The LED colours displayed during the power up sequence may vary depending on where the marker was originally purchased.

FIG-1





### FIG-1

After displaying the battery status on power up the GTEK's LED indicator **A** will display the status of the breech sensor (BS). The breech sensor (BS) is used to detect paintballs in the breech of the marker.

The LED also indicates the various marker parameter settings.

Table 2 shows each LED colour and its relevant BS status.

See pages 18-19 for marker parameter indicators.

### Battery status check

- 1 Tap the Select button **B**.
- 2 The LED indicator **A** will turn a steady colour for 2 seconds (see table 1 on page 08 for battery status colour information).

### Firing the GTEK

Pull the trigger to fire the GTEK. If the marker is able to fire then it will do so.

## WARNING!



When the battery indicator is being displayed the marker is still on and will fire if the trigger is pulled - depending on the BS status.

Do not dry fire/shoot the marker without paintballs. Prolonged dry firing may lead to damage/wear of the internal components of the marker.

FIG-1

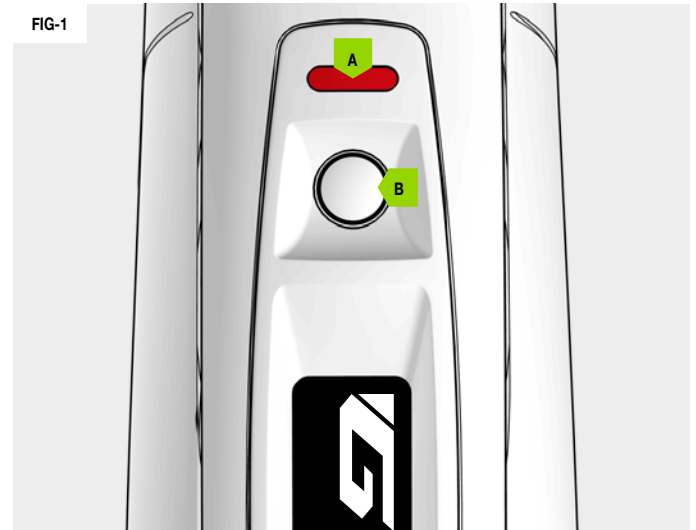


TABLE 2

LED COLOUR	BREECH SENSOR (BS) STATUS
FLASHING YELLOW	BS enabled. NO paintball detected. <b>Marker WILL NOT fire.</b>
FLASHING LIGHT BLUE	BS enabled. Paintball detected. <b>Marker WILL fire.</b>
FLASHING PURPLE (SLOW)	BS disabled. <b>Marker WILL fire.</b>
FLASHING PURPLE (FAST)	Blockage detected. BS disabled. <b>Marker WILL fire.</b>

# QUICK START

## SWITCHING THE GTEK ON/OFF WITH THE OLED BOARD FITTED

The navigation console **A** houses the Select button **B**, the LED indicator **C** and the OLED display **D**. Use the console to switch the GTEK On/Off and change the marker settings.

The LED indicators are still functional, regardless of the installation of the OLED board.

**FIG-1**

### Switching on the GTEK

Press and hold the Select button. Release the Select button when the LED lights up and your GTEK will begin its power up sequence.<sup>1,2</sup>

### Firing the GTEK


Pull the trigger to fire the GTEK. If the marker is able to fire then it will do so.

### Switching off the GTEK

Press and hold the Select button until the display shows GOODBYE. Release the Select button.

- 1 When the GTEK is turned on, the breech sensor is automatically enabled.
- 2 The LED colours displayed during the power up sequence may vary depending on where the marker was originally purchased.

FIG-1

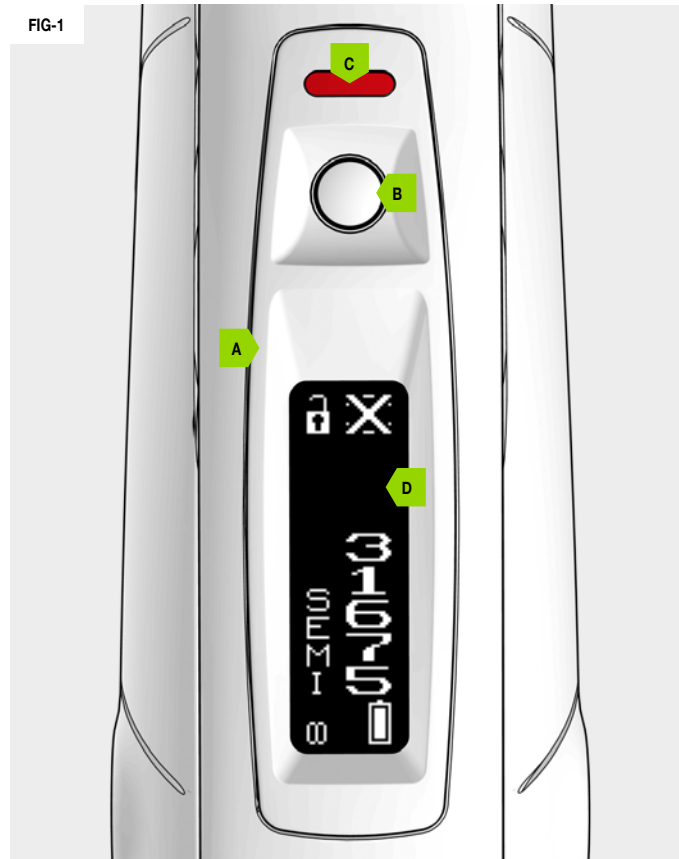

## WARNING!



Do not dry fire/shoot the marker without paintballs. Prolonged dry firing may lead to damage/wear of the internal components of the marker.

FIG-1

The breach sensor (BS) indicator **A** shows the following information:



### BS Enabled and ball detected

The GTEK can be fired at the chosen firing mode.



### BS Enabled no ball detected

The GTEK cannot be fired.



### BS Disabled

The GTEK can be fired as per the BS OFF ROF (see page 21).



### BS Fault detected

System is disabled. The GTEK can only be fired at a maximum rate of 2 bps less than the maximum rate of fire and 10 bps max.

The battery level indicator **B** shows the following information:



### Full battery

The battery is fully charged.



### Drained battery

Battery is at approximately 30% of useful charge.




### Battery circuit fault

The battery level cannot be determined.

For more information about the shot counter **D** and firing mode **E** and **F** see pages 21 to 23.

FIG-1

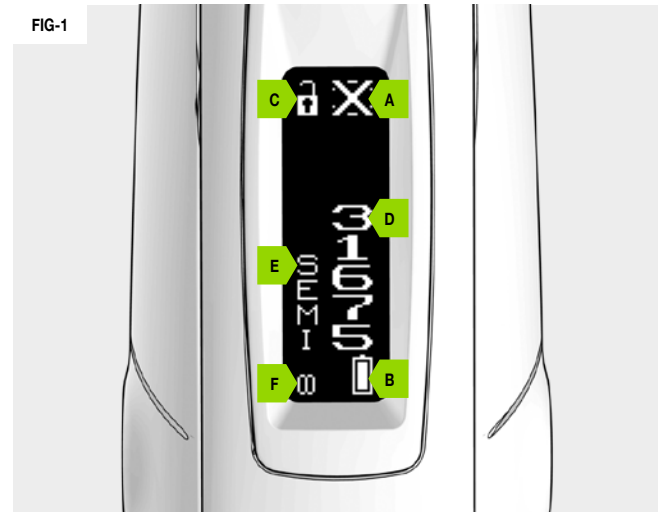

The lock indicator **C** shows the following information:



### Locked

Set-up mode cannot be accessed.  
This is the tournament legal state.



### Unlocked

Set-up mode can be accessed.

To change the tournament lock state see page 32.

## WARNING!



When the battery indicator is being displayed the marker is still on and will fire if the trigger is pulled - depending on the BS status.

# QUICK START

## VELOCITY ADJUSTMENT

**FIG-1**

Insert a 1/8 hex key **A** into the velocity adjuster screw **B** to alter the velocity of the GTEK.

- 1 Turn the hex key clockwise to reduce velocity.
- 2 Turn the hex key counter-clockwise to increase velocity.
- 3 Fire two clearing shots after each velocity adjustment for an accurate velocity reading.

**1** **DO NOT** turn the adjuster screw in too far. This will prevent the GTEK from firing.

### WARNING!




DO NOT exceed 300FPS.

Always wear correct protective equipment when firing your marker.

NEVER leave the GTEK gassed up when unloading.

NEVER point your marker in the direction of other people when not on the field.

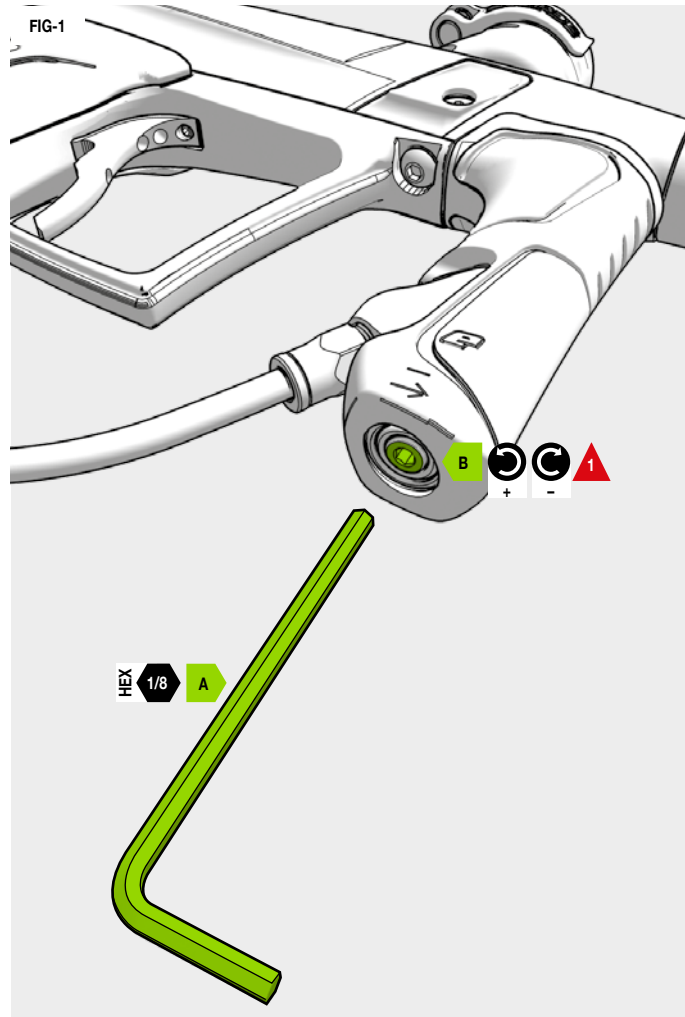

# QUICK START

## TRIGGER ADJUSTMENT

**FIG-1**

The pre-travel screw **A** adjusts the distance the trigger travels before the microswitch is actuated. Clockwise reduces the amount of travel (shortening the trigger), counter-clockwise increases the trigger pull distance.

The trigger pin locking screw **B** locks the trigger pin in place. Clockwise locks the pin, counter-clockwise releases the pin.

The trigger spring screw **C** adjusts the spring strength of the trigger return. Clockwise increases the spring strength, counter-clockwise reduces the spring strength.

The post-travel screw **D** adjusts the distance the trigger travels once the microswitch has been actuated. Clockwise reduces the amount of travel (shortening the trigger), counter-clockwise increases the trigger pull distance.

### WARNING!




Always make sure the marker is OFF and de-gassed with a barrel blocking device installed and that no paintballs are in the GTEK or loader before adjusting the trigger

Do not wind the screws in too far as this may prevent the GTEK from firing or even damage the marker.

If the pre-travel screw is wound in too far this could cause the GTEK to fire unintentionally.


**FIG-1**

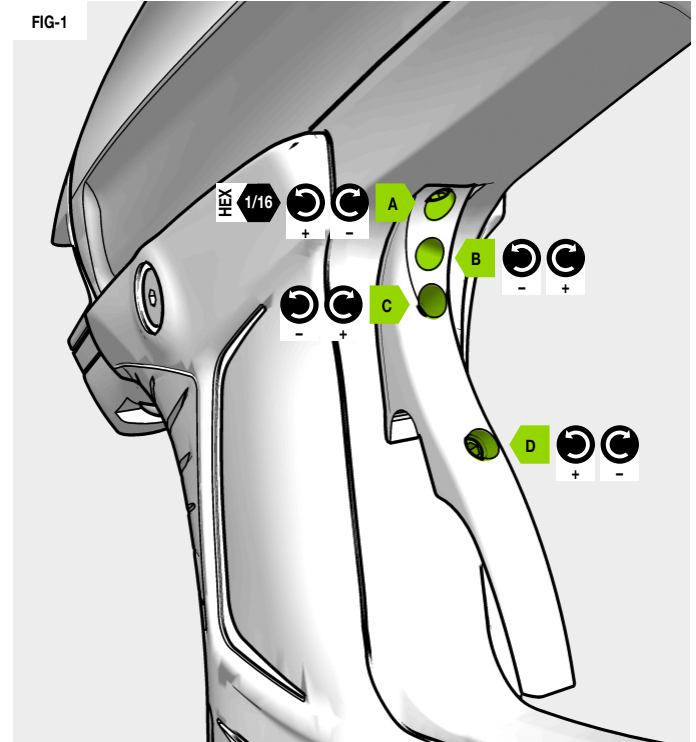

# QUICK START

## UNLOADING THE GTEK

FIG-1

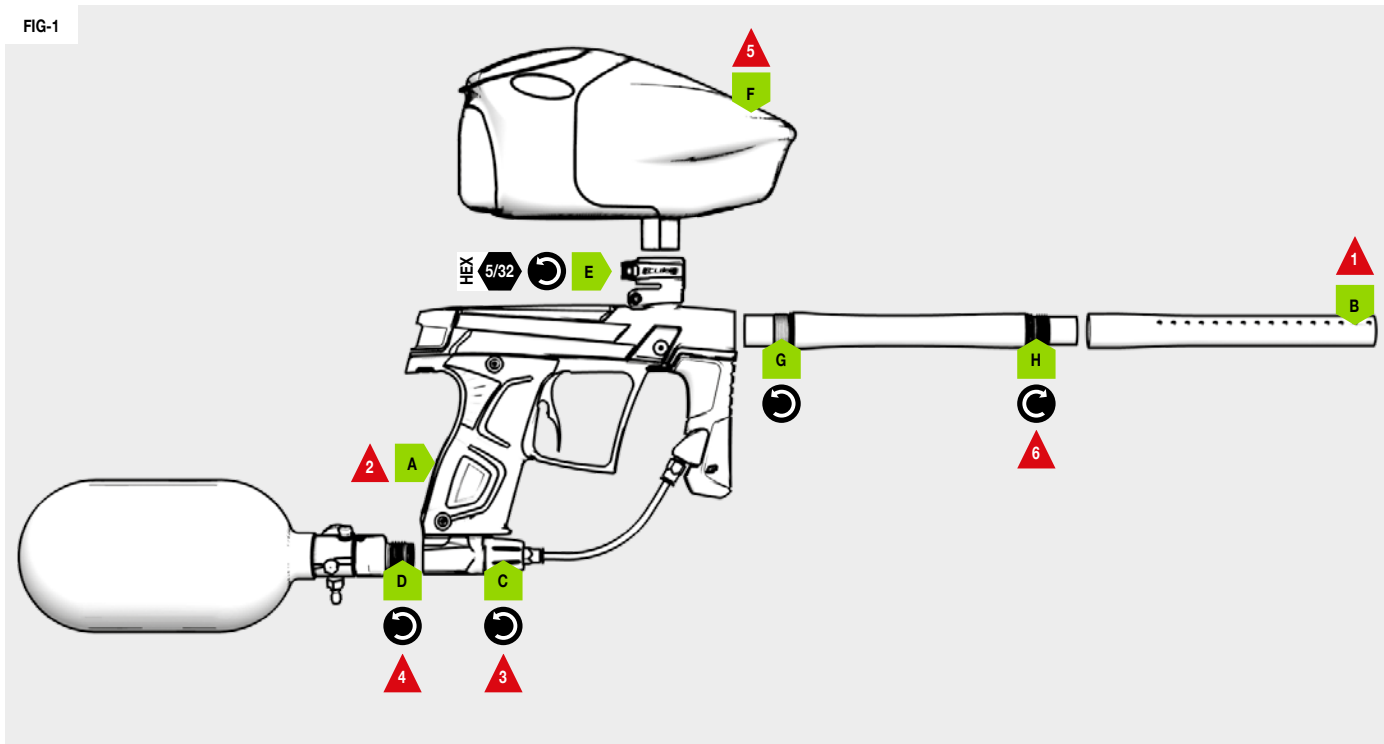

# QUICK START

## UNLOADING THE GTEK

### FIG-1

**A Switch the marker off.**

**B Ensure that a barrel blocking device is fitted for safety.**

**C De-gas the marker.**

Unscrew the On/Off Purge System (OOPS) knob counter-clockwise.

**D Remove the pre-set air system.**

Unscrew the air system counter-clockwise from the OOPS body.

**E Loosen the clamping feed neck.**

Open the feed neck lever away from the feed neck.

Unscrew the feed neck lever screw counter-clockwise.

**F Remove the loader.**

If the feed neck is too tight, loosen the clamping feed neck more.

**G Remove the barrel from the marker body.**

Unscrew counter-clockwise to remove.

**H Remove the barrel tip from barrel back.**

Unscrew clockwise to remove.



**IMPORTANT!** Extra precaution to avoid injury.



**IMPORTANT!** To switch off/on, see pages 8-11.



**IMPORTANT!** Always de-gas before unloading.



**IMPORTANT!** Always remove air system before unloading.



**IMPORTANT!** Always remove any paintballs from the breech of the marker once the loader has been removed.



**IMPORTANT!** Unscrew the barrel tip CLOCKWISE from the back.

## WARNING!



Always make sure the marker is off with a barrel blocking device installed and that no paintballs are in the GTEK or loader before unloading.

Compressed air and nitrogen systems can be extremely dangerous if handled or used incorrectly.












NEVER leave the GTEK gassed up when unloading.

NEVER point your marker in the direction of other people when not on the field.

Remove any paintballs from the breech before storing your GTEK.

# QUICK START

## STORAGE AND TRANSPORTATION

-  1 Your GTEK must be clear of all paint and propellant during transportation or storage.
-  2 Make sure the GTEK marker is switched off.
-  3 Remove the barrel from the marker.
-  4 Make sure the marker is clean of any paint residue, dirt and moisture.
-  5 Store your GTEK in a clean, cool, dry place.
-  6 Keep your GTEK away from any unauthorized and unsafe users.
-  7 Remove the battery when storing your GTEK to prevent unauthorized use.
-  8 Protect your GTEK from excessive heat during transportation.
-  9 When transporting a paintball marker by air, check with the airline regarding their policies on transporting paintball equipment as hold luggage before arriving at the airport.
-  10 Observe and obey all local and national laws concerning the transportation of paintball markers.
-  11 Use the box in which the marker was originally supplied to protect the marker against rough handling during transport.

## WARNING!

Never carry your GTEK un-cased when not on a playing field. The non-playing public and law enforcement personnel may not be able to distinguish between a paintball marker and a real firearm. For your own safety and to protect the image of paintball, always carry the Eclipse GTEK (or any other paintball marker) in a suitable marker case such as the one in which it was supplied.





# MAINTENANCE

## ON-LINE MAINTENANCE VIDEOS

To help demonstrate how to maintain and service essential parts of the GTEK we've created a collection of dedicated marker maintenance videos to guide the user through each step.

From basic, to more advanced parts of the GTEK, we've got your back.

Visit our **Tech Room** YouTube channel and check out the GTEK Maintenance playlist.

[www.youtube.com/user/planetecclipsetv](http://www.youtube.com/user/planetecclipsetv)



To modify the GTEK parameters you must enter the set-up mode:

- 1 Switch the tournament lock off (page 32).
- 2 Fully depress the trigger.
- 3 Switch on the GTEK (with trigger depressed).
- 4 Release the trigger.
- 5 If the LED flashes red, the tournament lock is still on.

Once in the set-up mode, use the trigger to cycle through the parameters, indicated by LED colours (see table below). Quickly press the Select button on any parameter to display the current settings.

LED COLOUR	PARAMETER	RANGE
RED	Pre-set	1 to 6
GREEN	Maximum ROF with BS on (capped modes only)	4.0 to 15.0 bps
BLUE	Maximum ROF with BS off	4.0 to 15.0 bps
PURPLE	Dwell	18.0 ms to 28.0 ms
LIGHT BLUE	Debounce	1 to 10

A long LED flash indicates the unit, whilst a short LED flash indicates the tenth. Eg, 5 long flashes and 3 short flashes would indicate 5.3.

### Modifying a parameter:

- 1 Enter the set-up mode.
- 2 Select a parameter.
- 3 Push and hold Select button for 1 second to confirm.
- 4 The LED will go off.
- 5 Increase the unit value using the trigger, one pull per unit. Do not pull the trigger if the value should be 0.<sup>1</sup>
- 6 Push the Select button to switch to tenths values.<sup>2</sup>
- 7 Increase the tenths value using the trigger, one pull per tenth. Do not pull the trigger if the value should be 0.
- 8 Push the Select button to confirm. The LED will flash 3 times. The LED will show green if the changes are confirmed. The LED will show red if the changes are NOT confirmed. If the LED is red repeat 5
- 9 Push and hold the Select button until the LED turns blue to exit set-up mode.

1 The settings will return to their previous saved values if you do not pull the trigger for 5 seconds.

2 If a parameter does not support tenths, this will be skipped.

The LED indicator communicates with the user through colour.

This overview page explains each colour and their roles once you enter the set-up mode (see page 18).

LED COLOUR	PARAMETER	DESCRIPTION
RED	SEMI ∞	Uncapped Semi-Automatic: one shot per trigger pull (no rate of fire cap).
	SEMI 15.0	Capped Semi-Automatic: one shot per trigger pull (15.0bps cap).
	WPBO 10.2	Capped Ramping: WPBO compliant (10.2bps cap).
	NXL 10.2	Capped Ramping: NXL compliant (10.2bps cap).
	MILL 10.2	Capped Ramping: Millennium Series compliant (10.2bps cap).
	PSP 10.2	Capped Ramping: PSP compliant (10.2bps cap).
<b>PLEASE NOTE:</b> At the time of writing, the WPBO, NXL and MILL presets are identical.		
GREEN	Maximum ROF (BS ON)	This controls how fast the GTEK can fire with the breech sensor on. Capped modes only.
BLUE	Maximum ROF (BS OFF)	This controls how fast the GTEK can fire with the breech sensor off. This should be set to the slowest speed of the loader.
PURPLE	Dwell	This controls the amount of time that the solenoid is energised.
LIGHT BLUE	Debounce	This controls the amount of 'anti-trigger bounce' that is present.
FLASHING BLUE	Factory reset	Press and hold the tournament lock button (page 32) for 2 seconds to restore all settings back to factory standard. The LED will flash blue to confirm this has been successful.

# ELECTRONICS

## THE OLED SET-UP MODE

To modify the parameters you must enter the set-up mode:

- 1 Switch the tournament lock off (page 32).
- 2 Fully depress the trigger.
- 3 Switch on the GTEK (with trigger depressed).
- 4 Release the trigger.
- 5 If the LED flashes red, the tournament lock is still on.
- 6 Once in the set-up mode, the OLED will display SETUP.
- 7 Use the trigger to cycle through the parameters, indicated by the screens opposite.
- 8 Quickly press the Select button on any parameter to display the current settings.

See pages 21-23 for parameter descriptions.



### PRESET

Modes may vary depending on global location and GTEK model.

- 1 **SEMI ∞**  
Uncapped Semi-Automatic: one shot per trigger pull (no rate of fire cap).
- 2 **SEMI 15.0**  
Capped Semi-Automatic: one shot per trigger pull (15.0bps cap).
- 3 **WPBO 10.2**  
Capped Ramping: WPBO compliant\* (10.2bps cap).
4. **NXL 10.2**  
Capped Ramping: NXL compliant\* (10.2bps cap).
5. **MILL 10.2**  
Capped Ramping: Millennium Series compliant\* (10.2bps cap).
6. **PSP 10.2**  
Capped Ramping: PSP compliant (10.2bps cap).



The rate of fire cap is deliberately set lower than the league rules allow in order to compensate for any tolerances in the rate of fire measuring devices.

\*At the time of writing, the WPBO, NXL and MILL presets are identical.

### BS ON ROF

This controls how fast the GTEK can fire with the breach sensor on. Capped modes only.

Available range: 4.0 - 15.0 bps

Default setting: 15.0 bps



### BS OFF ROF

This controls how fast the GTEK can fire with the breach sensor off. This should be set to the slowest speed of the loader.

Available range: 4.0 - 15.0 bps

Default setting: 10.0 bps



### KICK IN

The trigger pulls per second (pps) before ramping can start.

Available range: 3.3 - 10.0 pps

Default setting: 5.0 pps




### DWELL

Solenoid energise time in milliseconds (ms) for each shot.

Available range: 18.0 - 28.0 ms

Default setting: 23.0 ms

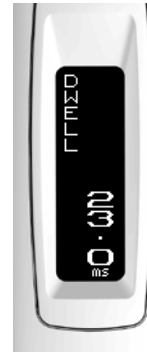

### RESTART

The time in seconds (s) after the last trigger pull before ramping is cancelled.

Available range: 0.0 - 1.0 s

Default setting: 0.0 s



### DEBOUNCE

Trigger anti-bounce settings. (1 = lowest level of filtering / 10 = highest level).

Available range: 1 - 10

Default setting: 5



### SLEEP

Auto power-off time in minutes (min).

Available range: 0 - 60 min

Default setting: 20 min



### DISPLAY

Sets the display information for the run screen.

**SHOTS:** Displays the shot counter

**ROF:** Displays the ROF indicator



### ZERO


Allows the user to reset the counters and indicators to ZERO.

**NONE:** Don't zero anything

**SHOTS:** Zero the shot counter

**ROF:** Zero the ROF indicator

**BOTH:** Zero shot counter and the ROF indicator

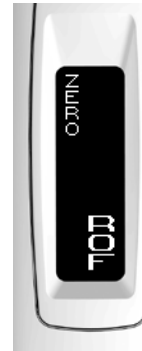


# RESET FACTORY RESET

It is important that the GTEK is set-up as per factory standards before use. To restore to factory settings, follow these steps.

## FIG-1

- 1 Reset the control parameters (page 19)
- 2 Using the 1/8 hex key **A** turn the inline regulator **B** screw 4 turns clockwise from it's fully screwed-out position.

**1** **DO NOT** turn the adjuster screw in too far. This will prevent the GTEK from firing.

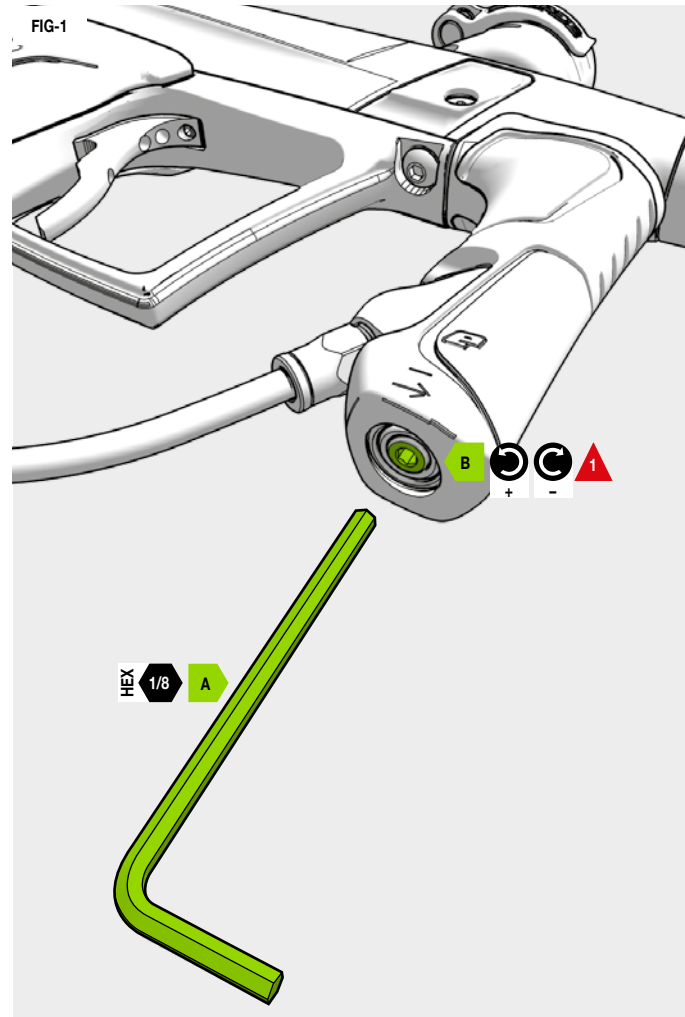



# RESET

## INSTALLING A 9V BATTERY

Switch off the GTEK and place on a flat surface - feed neck facing away from you and the barrel pointing to the right.

### FIG-1

Using the 5/64" (2mm) hex key **A** remove the grip screws on the right hand side of the grip.

### FIG-2

Gently remove the 9V battery using the recessed access point **B**.

Install a new 9V Alkaline battery (type PP3, 6LR61, 1604A) with the battery connectors **C** facing downwards inside the frame.

Replace the rubber grips and tighten the screws as in **FIG-1**.

**1** **DO NOT** over-tighten the screws.

**2** **DO NOT** use re-chargeable or poor quality batteries.

FIG-1


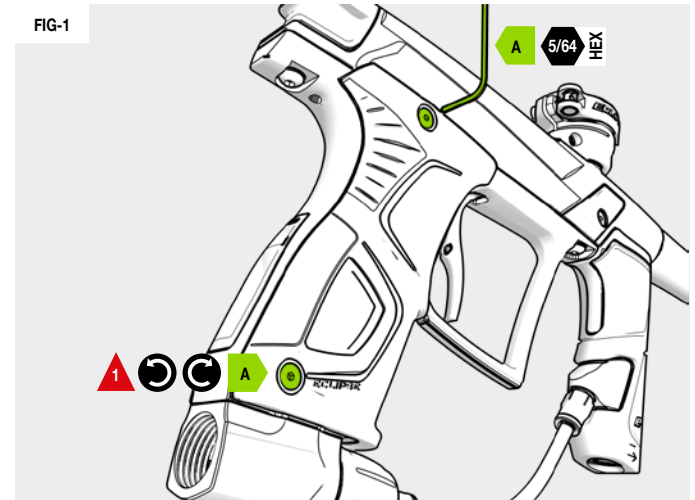


FIG-2

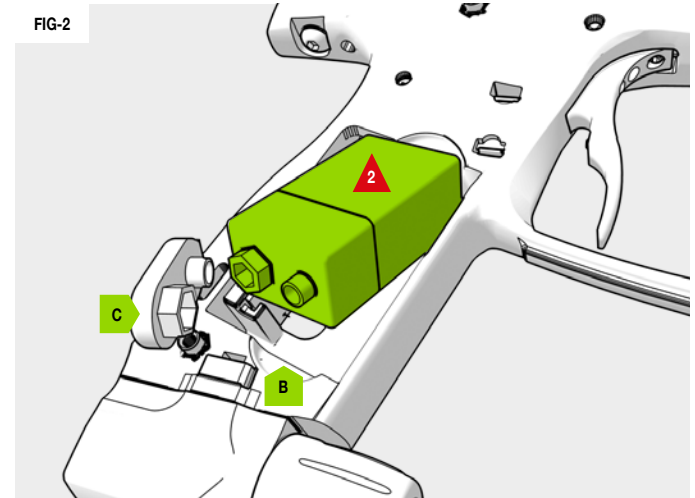

# FAULT FINDING

## FAULT FINDING TABLES

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Although a fresh battery has been fitted, the GTEK will not switch on.	The battery has drained on the shelf.	Replace with another battery.
	The battery connector is not making proper contact with the battery.	Disconnect the battery. Gently squeeze the large terminal on the battery connector to reduce its diameter. Reconnect the battery.
The battery does not seem to last very long.	The battery type is of a low quality.	Use an alkaline or lithium battery. Do not use a low quality or rechargeable battery.
The GTEK leaks from the solenoid and/or manifold.	The two o-rings under the solenoid body or the gasket under the solenoid plate are damaged or dirty.	Ensure the gasket is seated correctly. Replace the gasket if damaged using GTEK parts kit. Check condition of the 5x1 NBR70 and 3x1 NBR70 o-rings under the solenoid body.
	Solenoid valve and/or manifold are over-pressurised.	Check the output pressure of the inline regulator and adjust accordingly. Clean and inspect the inline regulator assembly paying particular attention to the piston tip and regulator seal. Replace damaged components as necessary.
	Damaged or incorrect seals on the solenoid spool.	Replace and/or lubricate solenoid spool seals.
	Damaged GTEK SMC solenoid pilot valve.	Replace GTEK SMC pilot solenoid valve.
The GTEK leaks down the barrel.	Dirty or damaged can o-rings.	Clean and lubricate or replace 020 NBR70 and 017 NBR o-rings on the front of the can.
	Dirty or damaged o-rings on the spool.	Clean and lubricate or replace the 011 NBR70 and 012 NBR70 o-rings on the main spool.
	Dirty or damaged bolt o-rings.	Clean and lubricate or replace 14x2 NBR70 o-ring on the back of the bolt.
	Dirty or damaged rear bolt guide o-ring.	Clean and lubricate or replace 14x2 NBR70 o-ring towards the back of the bolt guide.

# FAULT FINDING

## FAULT FINDING TABLES

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Low rate of fire / rate of fire not reaching the ROF cap.	The force setting of the loader is too low.	Adjust the loader force feed setting.
	The breech sensor is defaulting and reducing the ROF.	Check the position and condition of the breech sensors. Clean or replace the breech sensors as required.
The marker is breaking paintballs in the barrel or breech.	The ball detents are damaged or missing.	Replace the ball detents.
	The force setting of the loader is too high.	Reduce the loader force feed setting.
	The paint is poor quality.	Try a higher grade of paint.
	The breech sensor is switched off.	Switch on the breech sensor.
	The bolt and/or breech sensor is dirty	Clean the bolt and breech sensor.
	The velocity is set too high.	Check and adjust the velocity of the GTEK.
The GTEK does not fire.	The GTEK is not powered on.	Power up the GTEK using the button on the back of the GTEK grip frame.
	The OOPS is not fully engaged.	Twist the OOPS knob in until it engages.
	The battery quality or charge level is very low.	Install new high quality alkaline or lithium battery.
	The battery is flat.	Replace the battery.
	The DWELL parameter is set too low.	Increase the DWELL parameter.
	The trigger is set-up incorrectly.	Adjust trigger correctly to fully open and close the microswitch.
	The solenoid is not plugged into the GTEK PCB.	Plug solenoid wire into port on the GTEK PCB.
	The breech sensor is enabled but there is no paint in the breech.	Fill loader with paint.
	The PCB is damaged.	Replace PCB.
The solenoid valve is damaged.	Replace solenoid valve.	

# FAULT FINDING

## FAULT FINDING TABLES

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Low constant velocity.	The inline regulator output pressure set too low.	Increase the output pressure of the inline regulator.
High velocity first shot.	The inline regulator pressure is creeping.	Strip and clean the inline regulator replacing the regulator seal inside the regulator adjuster assembly.
Velocity drop-off during rapid fire.	The battery quality or charge level is low.	Install a new high quality alkaline or lithium battery.
	Air system regulator does not have high enough flow.	Try another air system.
	Dirty/partially blocked inline regulator.	Strip, clean, lubricate and rebuild the inline regulator.
The trigger is very "bouncy".	Incorrect filter settings.	Check that your DEBOUNCE settings suit your trigger set-up.
	The trigger pull is too short and the return strength is too low.	Refer to using the GTEK section for guidelines of how to adjust your GTEK trigger accordingly.
The breech sensor is not reading correctly.	The breech sensor is dirty.	Keep the breech sensor clean to ensure correct readings.
	The breech sensor is fitted incorrectly.	Check that the red receiver is on the right-hand side of the breech and the sensors pointing towards each other through the breech.
	There is a broken wire or contact or a short circuit on either of the breech sensor cables.	Check the plug of the cables. Check for cuts or pinches in the sensor cables.
The breech sensor turns itself off after firing and the display shows that there is a fault with the breech sensor.	The sensor is dirty.	Clean the breech sensor.
	The sensor is faulty.	Replace the breech sensor.
	The sensor is out of place.	Re-install breech sensor. Check alignment.

# FAULT FINDING

## FAULT FINDING TABLES


SYMPTOM	POSSIBLE CAUSE	SOLUTION
Two or more balls are being fed into the breech.	Worn, damaged or missing ball detents.	Change the rubber ball detent.
	The feed force too high from loader.	Adjust loader settings/use lower force loader.
GTEK is inconsistent.	The inline regulator is supercharging.	Strip and clean inline regulator, replace regulator seal.
	The DWELL is too low.	Increase the DWELL setting.
	Poor quality paintballs.	Use better quality paintballs.
	Poor paintball size to barrel bore match.	Use a closer paintball to barrel bore size.
GTEK is inefficient.	Inconsistent air supply from air system.	Use a good quality air system.
	Poor paintball size to barrel bore match	Use a closer paintball to barrel bore size.
When the GTEK powers up the LED flashes white or red.	The trigger is being pulled.	Release the trigger before powering on the GTEK.
	Microswitch is permanently depressed by an incorrectly set trigger.	Adjust the trigger so that when the trigger is at rest the microswitch is not being activated.

If an issue with the GTEK cannot be solved using the fault finding guide, contact your nearest Eclipse Service Centre for assistance.

# TECHNICAL INFORMATION

## PARTS LIST

FIG-1

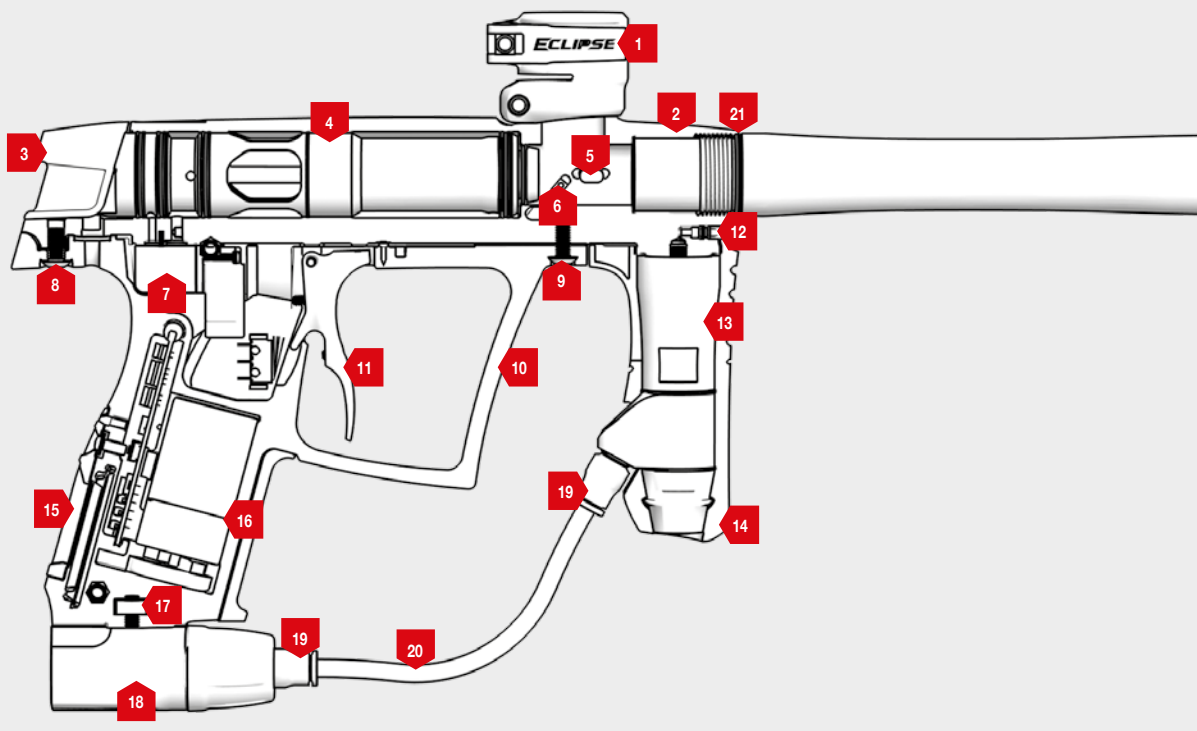

---

**FIG-1**

- 1** Clamping feed tube assembly
- 2** Marker body
- 3** Quick-release bonnet
- 4** Bolt assembly
- 5** Rubber detent
- 6** Breech sensor (BS) unit
- 7** Solenoid assembly
- 8** Rear frame screw
- 9** Front frame screw
- 10** Frame assembly
- 11** Trigger assembly
- 12** Body plug
- 13** SL4 inline regulator assembly
- 14** Regulator sleeve
- 15** Navigation console
- 16** 9V battery
- 17** On/Off Purge System (OOPS) retaining nut
- 18** OOPS assembly
- 19** Macroline fitting
- 20** Macroline
- 21** Barrel o-ring #016 NBR70

# TECHNICAL INFORMATION

## TOURNAMENT LOCK BUTTON

### FIG-1

To access the tournament lock button use the 5/64" (2mm) hex key **A** remove the grip screws on the left hand side of the grip **B**.



### FIG-2

The tournament lock button **C** is on the left side of the circuit board (see page 39). To lock / unlock your marker push the button once.

The LED or OLED will display the locked/unlocked mode status (see pages 18-23).

Replace rubber grip and screws as per **Fig-2**.

**1** **DO NOT** over-tighten the screws.

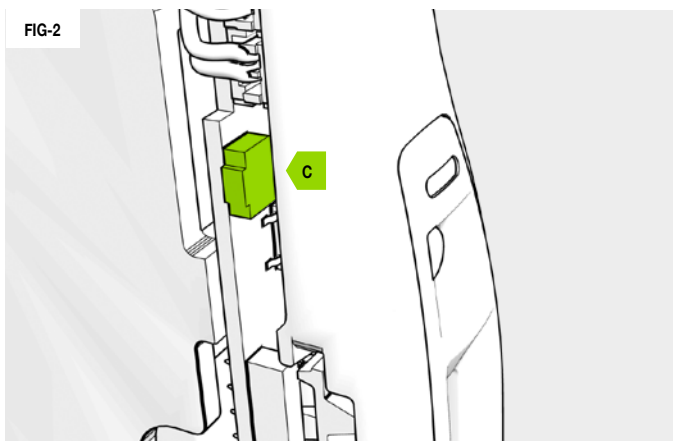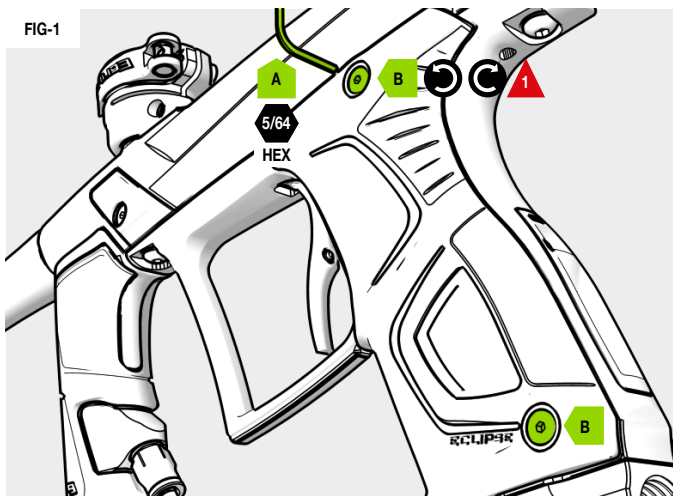

## WARNING!



Always ensure the marker is made safe before changing the tournament lock state to avoid accidentally firing the marker.



# TECHNICAL INFORMATION

## INSTALLING THE GTEK OLED BOARD

**FIG-1**

Using the 5/64" (2mm) hex key **A** remove the grip screws **B** on both sides of the grip. Remove the grips and the battery (see page 25).

**FIG-2**

Gently unplug the BS, solenoid and microswitch connectors **C** (page 39) and gently remove the GTEK graphic plate **D** (page 40).

**FIG-3**

Push from the right/underside to remove GTEK circuit board **E**.

**FIG-4**






Attach the GTEK OLED board **F** to the GTEK circuit board **G** mating the OLED board pins to the OLED connector **H** (page 39).

**FIG-5**

Insert the circuit board and OLED board into the frame space **I**. Ensure the board is held in place by the retaining clip **J** (page 40). Reverse **Fig-2** and **Fig-1** to complete installation.

**1** **DO NOT** over-tighten the screws.


**2** **IMPORTANT!** Ensure that the pushbutton cap does not damage the red pushbutton on the circuit board. Point the marker towards the ceiling so that the pushbutton cap falls away from the circuit board.

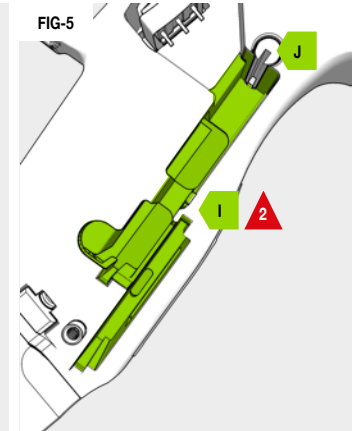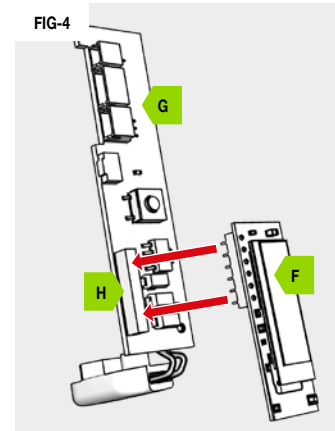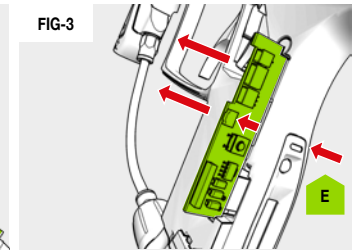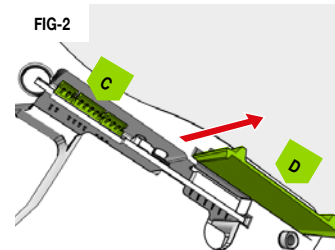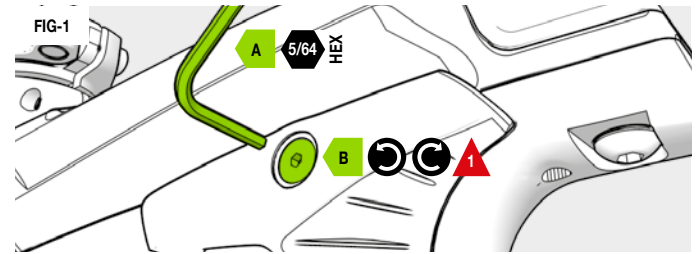

# TECHNICAL INFORMATION

## SL4 INLINE REGULATOR <sup>1,2</sup>


FIG-1

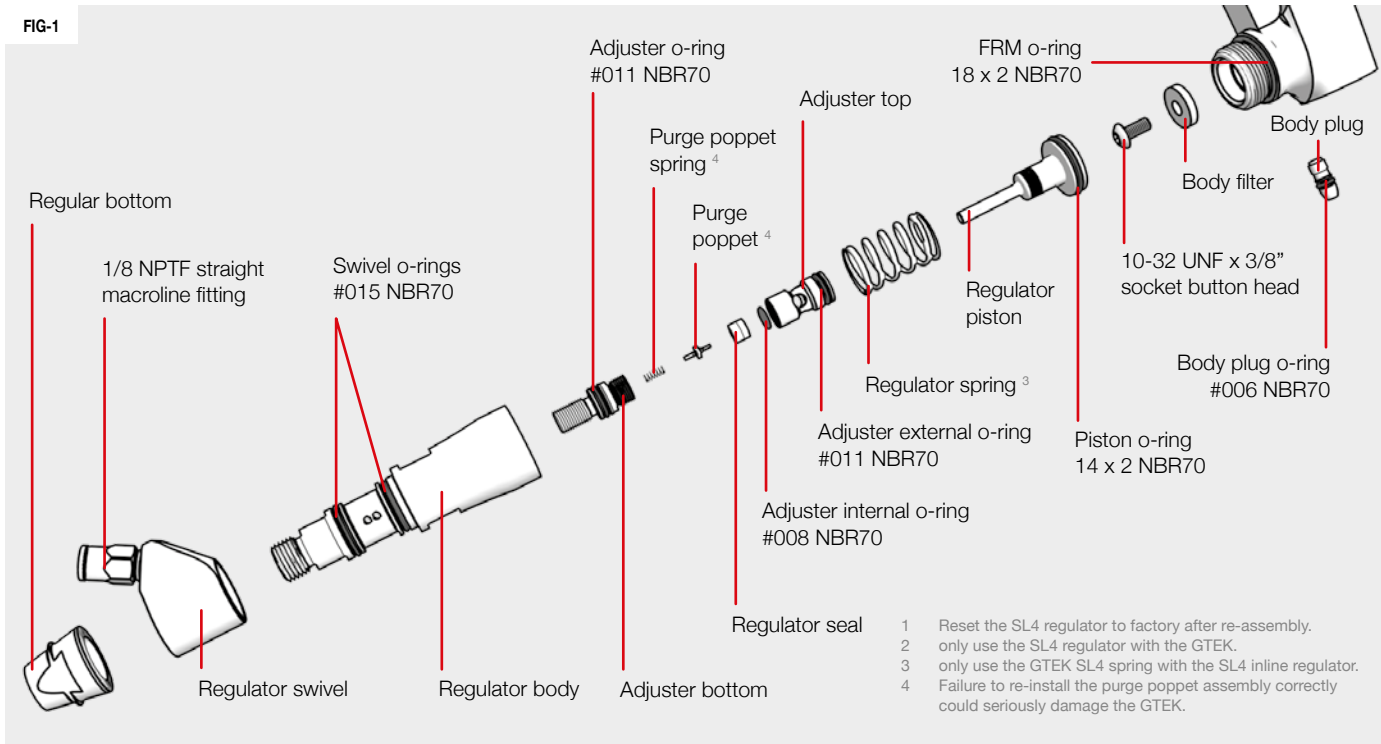

# TECHNICAL INFORMATION

## GTEK BOLT ASSEMBLY


FIG-1

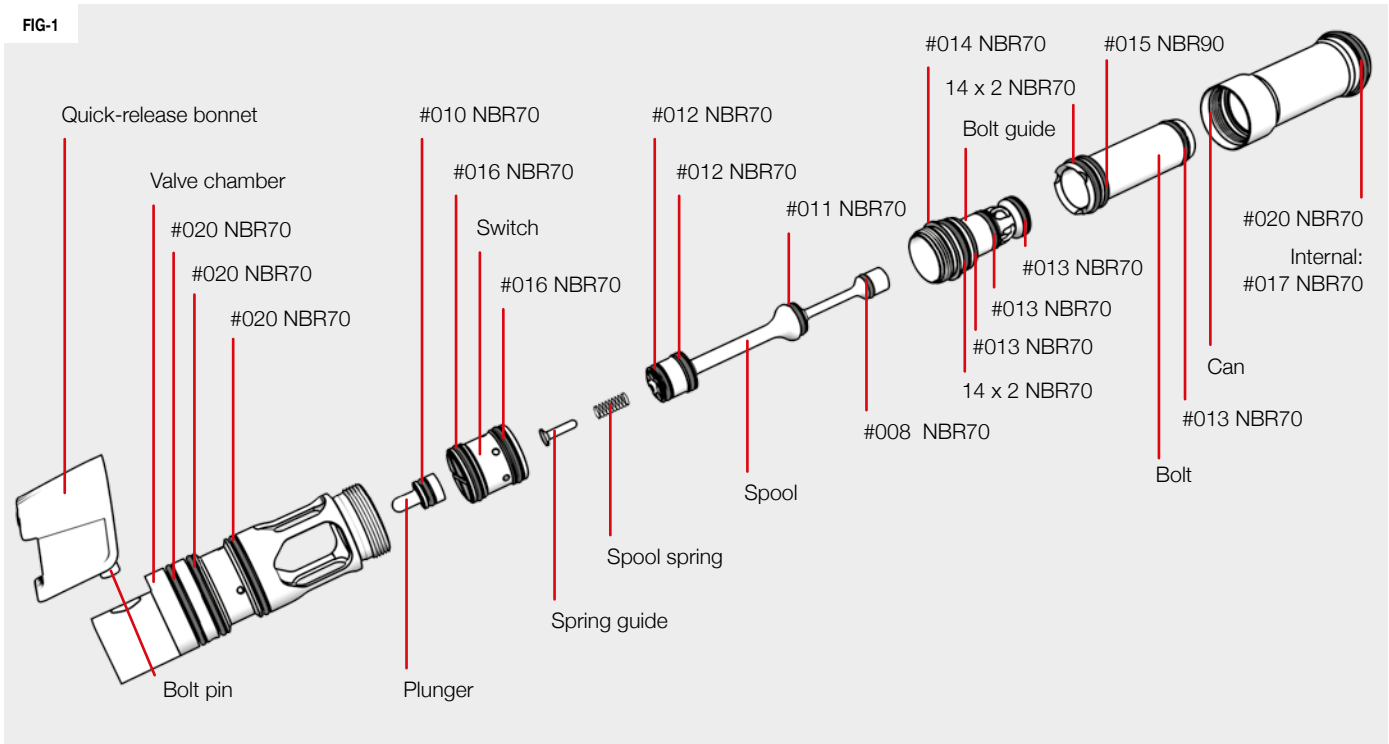

# TECHNICAL INFORMATION

## SOLENOID ASSEMBLY


FIG-1

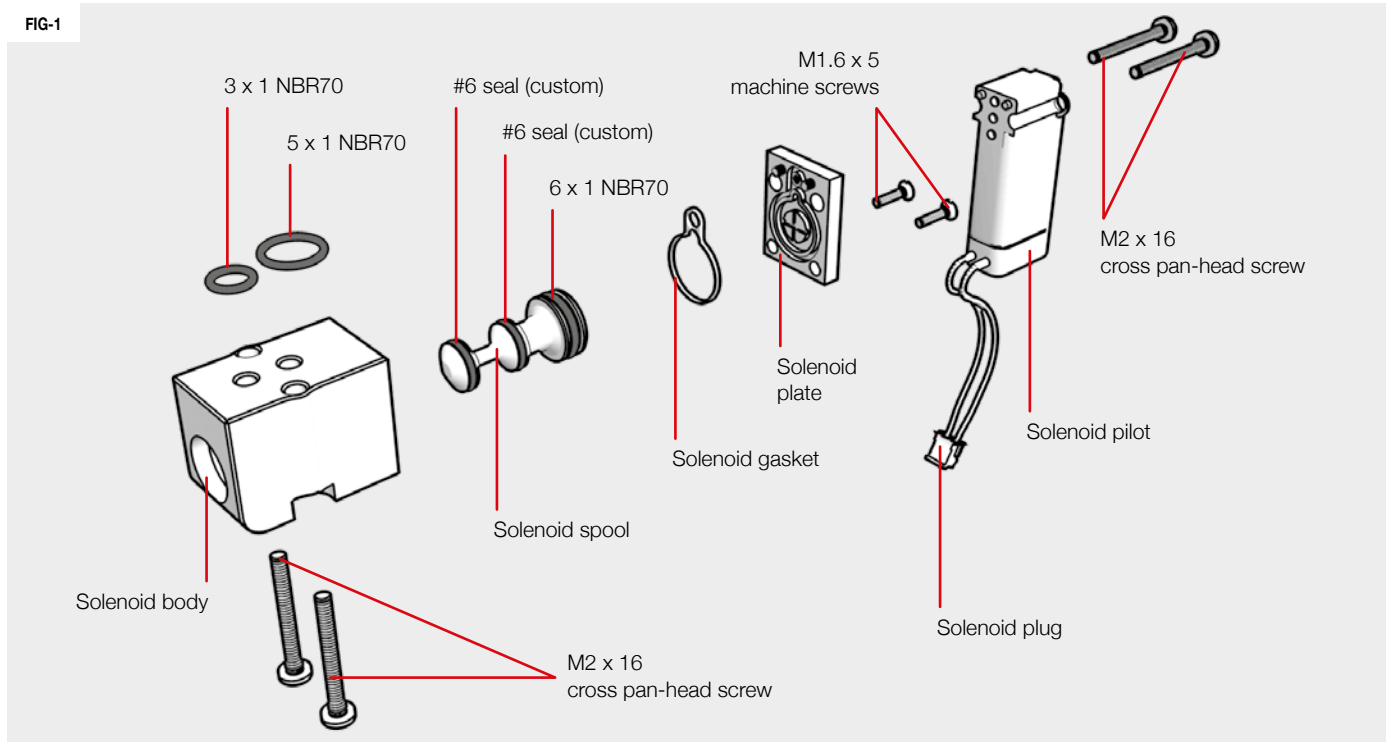

# TECHNICAL INFORMATION

## ON/OFF PURGE SYSTEM (OOPS) ASSEMBLY

FIG-1

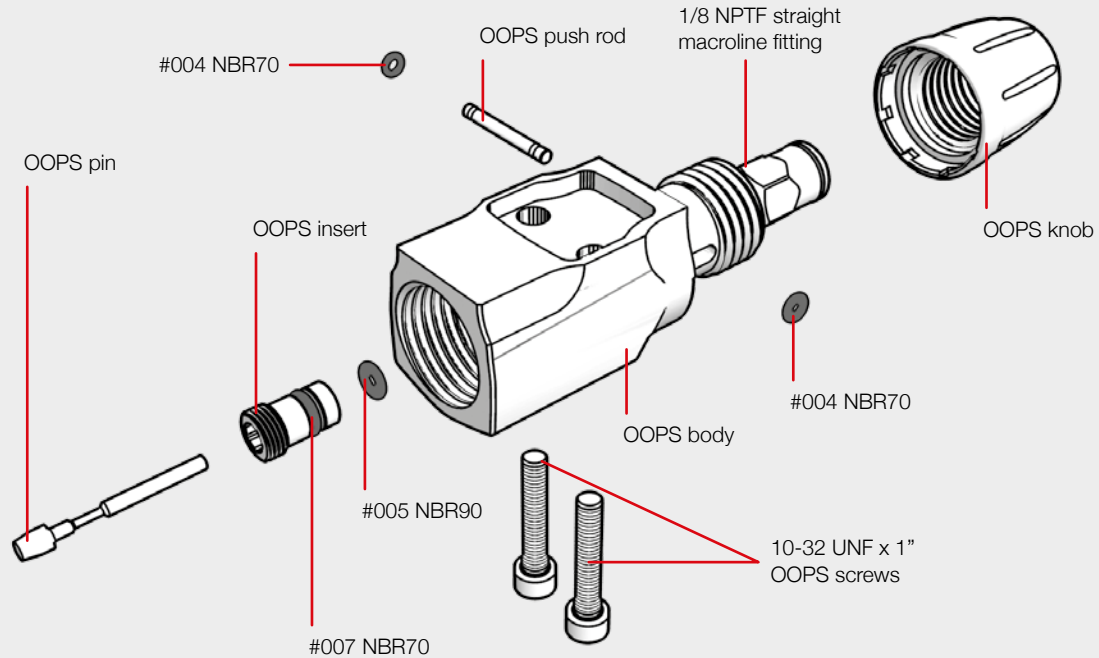

# TECHNICAL INFORMATION

## TRIGGER ASSEMBLY / CLAMPING FEED TUBE ASSEMBLY

FIG-1


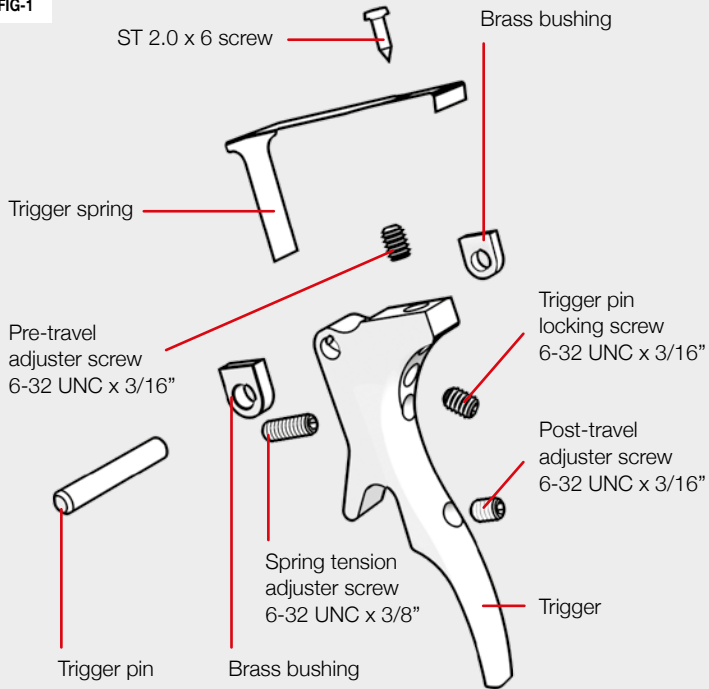


FIG-2

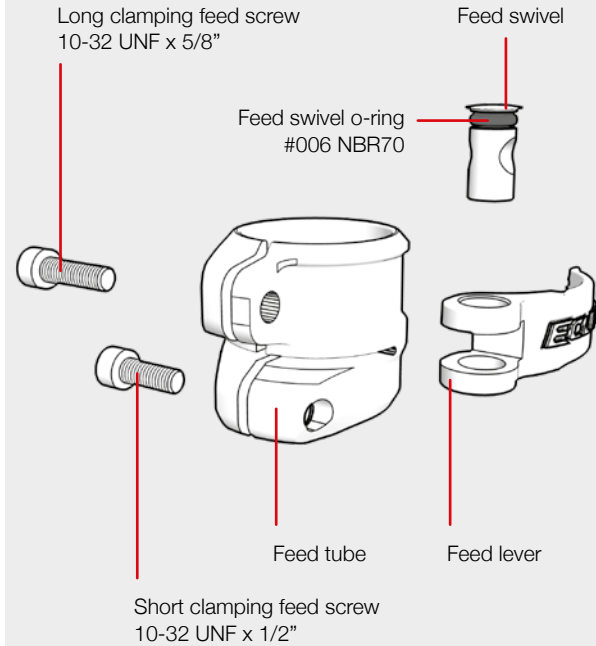

# TECHNICAL INFORMATION

## GTEK CIRCUIT BOARD / GTEK OLED BOARD

### FIG-1 GTEK circuit board

- A** Solenoid valve connector.
- B** BS connector.
- C** Microswitch connector.
- D** Tournament lock button.
- E** LED.
- F** Select button.
- G** OLED board connector.

### FIG-2 GTEK OLED board

- A** OLED board.
- B** OLED board connector.
- C** OLED board pins.

- 1** **IMPORTANT!** The OLED screen has a protective film which must be removed carefully before installation. Lift the green tab to remove.
- 2** **IMPORTANT!** To avoid damage ensure that the OLED board is the correct way up and that all of the pins are fitted correctly.

FIG-1

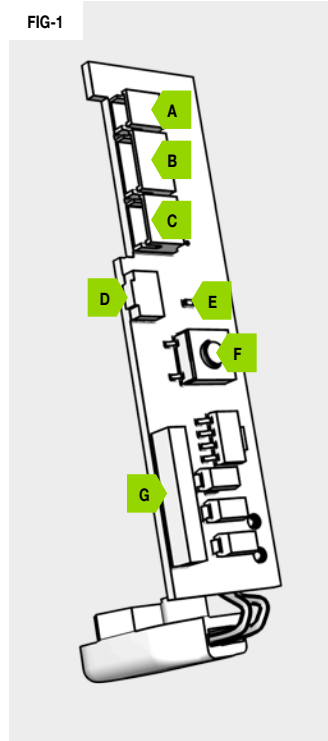


FIG-2


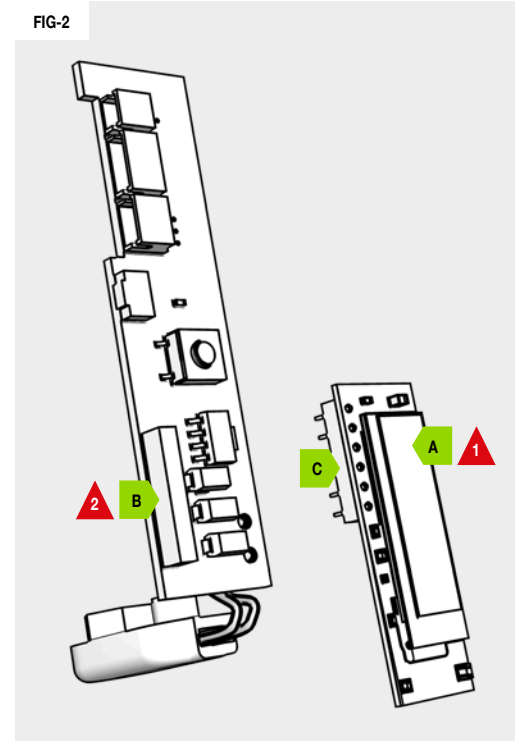


FIG-1

- 1** Navigation console
- 2** Protective lens
- 3** LED tube
- 4** Select push button
- 5** OOPS assembly
- 6** GTEK graphic plate (replaced by the OLED board)
- 7** GTEK circuit board
- 8** Microswitch clip
- 9** Microswitch
- 10** Circuit board retaining clip
- 11** GTEK frame

**1** **ALWAYS** Ensure this is removed carefully before installing the GTEK OLED board upgrade.



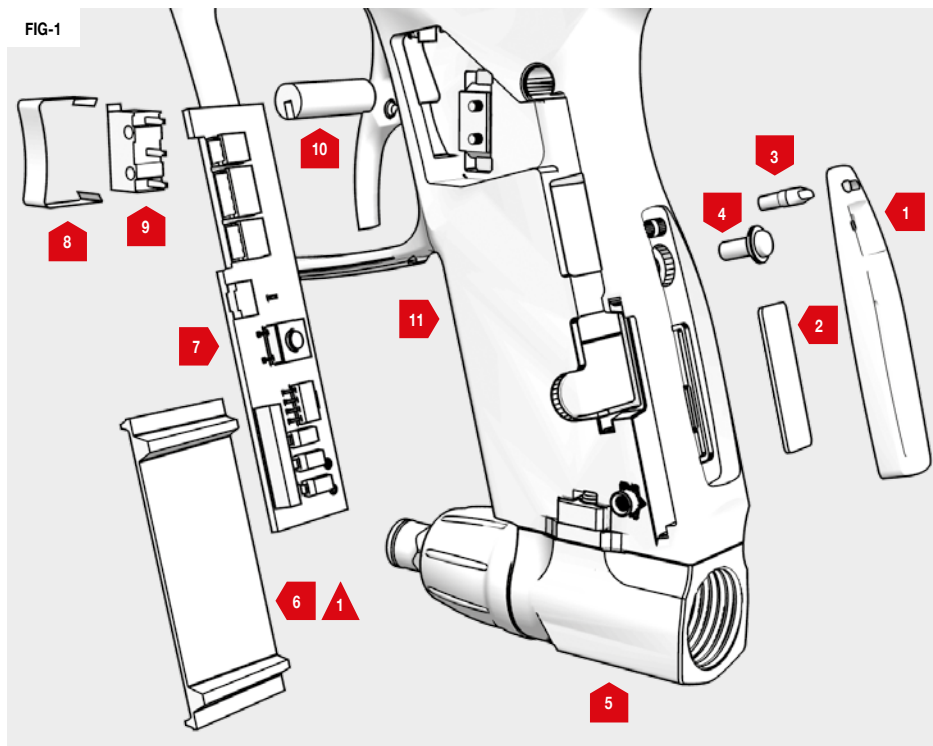


# TECHNICAL INFORMATION

## BREECH SENSOR (BS) ASSEMBLY

**FIG-1**

- A** Breech cover screw  
6-32UNC x 5/16  
countersunk socket screws
- B** Breech sensor cover
- C** Breech sensor
- D** Rubber detent

The elements within this diagram apply to both sides of the marker.

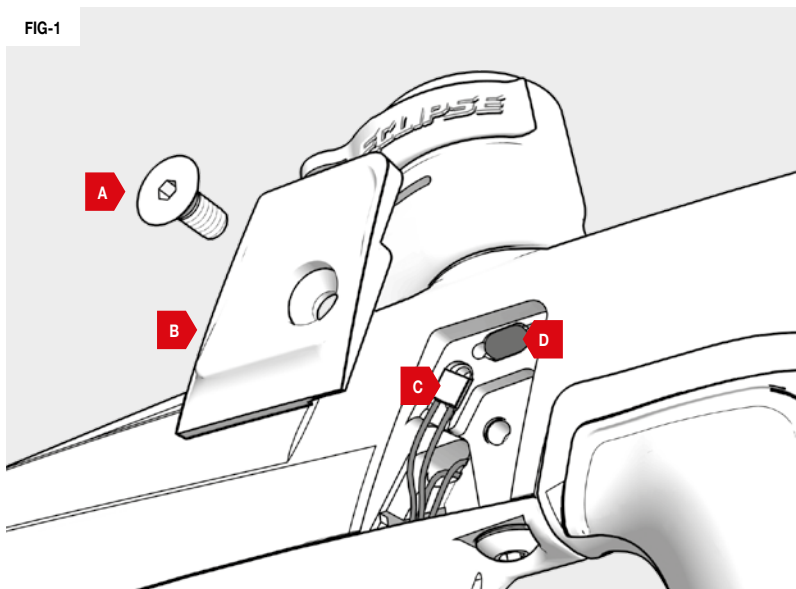**FIG-1**

**B**

Barrel: **07,15,25**  
Barrel blocking device: **07,15**  
Battery: **04,08,09,11,16,25,26,27,28,31,33**  
BLUE: **09,18,19**  
Bolt: **31,35**  
Breech Sensor: **08,10**  
BS OFF ROF: **11,21**  
BS ON ROF: **21**

**C**

Circuit board: **04,32,33,39,40**  
Clamping feed neck: **07,15**

**D**

DEBOUNCE: **22,28**  
Detent: **29,31,41**  
DISPLAY: **23**  
DWELL: **22,29**

**F**

Factory settings: **24**  
Fault: **04,11,26,27,28,29**  
Firing: **10**  
FLASHING BLUE: **19**  
Frame: **04,31**

**G**

GREEN: **08,18,19**

**I**

Installing: **07,25,33,40**

**K**

KICK IN: **22**

**L**

LED: **04,08,09,10,18,19,20,29,32,39,40**  
LIGHT BLUE: **09,18,19**  
Loader: **07,15**

**M**

Macroline: **07,34,37**  
Maintenance videos: **17**  
Microswitch: **29,40**

**N**

Navigation Console: **08,10**

**O**

OLED: **04,10,20,32,33,39,40**  
On/Off Purge System: **07,15**  
OOPS: **04,07,15,27,31,37,40**

**P**

Pre-travel screw: **13**  
PURPLE: **09,18,19**

**R**

RED: **08,18,19,20**  
Regulator: **02,03,04,07,24,26,28,29,31,34**  
Reset: **04,19,23,24,25**  
RESTART: **22**

**S**

Select button: **08,09,10,18,20,39**  
Setting up: **06,07**  
Set-up mode: **04,18,19,20**  
Shot counter: **11,23**  
SL4: **04,31,34**  
SLEEP: **23**  
Solenoid: **04,22,26,31,36,39**  
Storage: **02,16**  
Switching Off: **08,10**  
Switching On: **10**

**T**

Tournament lock: **11,18,19,20,32**  
Trigger: **09,10,11,13,18,19,20,21,22,27,28,29,38**

**V**

Velocity: **03,12,27,28**

**W**

WARNING: **03,07,09,10,11,12,13,15,16,32**  
WARRANTY: **43**

**Y**

YELLOW: **08,09**

**Z**

ZERO: **23**

# SUPPORT OUR PROMISE



## SUPPORT

As an Eclipse customer you will have access to our worldwide technical support network that will help you with any technical problems from localised service centres to on-site\* tech support.



## WARRANTY

Our exceptional 12 month\* manufacturers warranty backed by our online warranty system offers peace of mind and ensures your claim will be repaired or replaced in a snap!



## QUALITY

All Eclipse products undergo meticulous checks by experienced specialists who care about the product that arrives at your door. Stringent quality control and the use of precision materials equals a quality product.



## STANDARD

Your Eclipse marker is awesome and requires no aftermarket parts, however, for genuine Eclipse accessories that compliment your playing preference or individual style consult your local Eclipse Dealer for upgrade options.

For more information about our Planet Eclipse Approved Tech Centres, visit our servicing page online:

[PLANETECLIPSE.COM/SITE/SERVICE-CENTRES](http://PLANETECLIPSE.COM/SITE/SERVICE-CENTRES)

\* Conditions apply, see online policies for full details at [planeteclipse.com](http://planeteclipse.com)







**GET MORE  
PLANETECLIPSE.COM**



**THIS PRODUCT IS COVERED BY AND/OR LICENSED UNDER ONE OR MORE OF THE FOLLOWING PATENTS:**

**G.B. PATENTS:**

2,342,710; 2,345,953; 2,352,022; 2,391,292; 2,391,063;

**U.S. PATENTS:**

7,836,873; 7,603,995; 7,073,284; 8,104,463; 7,509,953; 7,921,839; 7,089,697; 7,866,307; 8,082,912; 7,076,906; 7,607,424; 7,980,238; 8,960,175; 8,528,877; 8,201,547; 8,397,706; 8,210,160; 7,073,284; 6,311,682; 6,748,938; 6,860,259; 6,941,693; 6,973,748; 5,881,707; 5,967,133; 6,035,843; 6,474,326; 6,637,421; 6,644,295; 6,810,871; 6,901,923; 7,121,272; 7,100,593; 7,610,908; 7,603,997; 7,946,285; 6,349,711; 7,044,119; 7,185,646; 7,461,646; 7,556,032; 7,591,262; 7,617,819; 7,617,820; 7,640,925; 7,640,926; 7,866,308;

**APPLICATION NUMBERS:**

12/256,832; 12/613,958; 12/493,777; 11/654,721; 11/747,107; 12/503,504; 11/781,821; 60/832,548; 11/965,886; 10/280,115

Additional U.S. and International Patents may be pending.

**USA**

130 Franklin Street  
Building L4 & L5  
Warren, RI, 02885, USA  
Call: +1 401 247 9061  
info.usa@planeteclipse.com

**UK**

Unit 14 Premier Park, Acheson Way  
Trafford Park Road, Trafford Park  
Manchester, M17 1GA, England  
Call: +44(0) 161 872 5572  
info.europe@planeteclipse.com

© 2015 Copyright Planet Eclipse Ltd. Eclipse, Planet Eclipse, the E Logo Device, Geo, CS1, Ego, Etek, Gtek, Etha and EMC are all either design trademarks, registered trademarks or trademarks of Planet Eclipse Ltd. All other trademarks are property of their respective owners.

MAN0019-GTEK-EN-Manual-V3